



VIZON® with a double "Z" is a registered trademark of Sanyo Manufacturing Corporation.

FILE NO.

SERVICE MANUAL

Remote Control Digital Color Television

DP26647 (U.S.A.) (CANADA) ORIGINAL VERSION



Chassis No. P26647-01

NOTE: Match the Chassis No. on the unit's back cover with the Chassis No. in the Service Manual.

> If the Original Version Service Manual Chassis No. does not match the unit's, additional Service Literature is required. You must refer to "Notices" to the Original Service Manual prior to servicing the unit.

> > 4001/40

Servicing should be performed by only trained and qualified service personnel.

Contents

Safety Instructions
Service Adjustments 3 – 4
Power Failure Circuit 5
Mechanical Disassemblies 6 – 7
Chassis Electrical Parts List 8 – 23
Cabinet Parts List 24
Component and Test Point
Locations
Block Diagrams
Troubleshooting Flow Charts 39 – 41
Control Port Functions42 – 43
Schematic Notes
Pin Layouts
Capacitor and Resistor Codes 46
PC Board Connections and Locations 47
Schematic Diagrams 49 – 50

Specifications

Power Rating 120VAC
104W, 2.4A (Max)
Antenna Input Impedance
UHF/VHF/CATV
Digital
Receiving Channel 2 - 13 (VHF),
14 - 69 (UHF),
01, 14-94, 95-125 (CATV)
1-99 (Digital)
Remote Ready 32 Key Remote Control
Sound Output 3.0 W/CH
Intermediate Frequency
Picture IF Carrier 45.75MHz
Sound IF Carrier 41.25MHz
Color Sub Carrier 42.17MHz
Cabinet Dimensions
Width 678mm
Height
Depth including base 176mm

SAFETY INSTRUCTIONS

SAFETY PRECAUTIONS

WARNING: The chassis of this receiver has a floating ground with the potential of one half the AC line voltage in respect to earth ground. Service should not be attempted by anyone not familiar with the precautions necessary when working on this type of equipment.

The following precautions must be observed:

- An isolation transformer must be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
- 2. Comply with all caution and safety-related notes provided inside the cabinet, on the chassis, and on the back.
- 3. When replacing a chassis in the cabinet, always be certain that all the protective devices are installed properly, such as control knobs, adjustment covers, shields and barriers.
- Before replacing the back cover of the set, thoroughly inspect the inside of the cabinet to see that no stray parts or tools have been left inside.

Before returning any television to the customer, the service technician must perform the following safety checks to be sure that the unit is completely safe to operate without danger of electrical shock.

ANTENNA COLD CHECK

Remove AC plug from the 120 VAC outlet and place a jumper across the two blades. Connect one lead of an ohmmeter to the jumpered AC plug, and touch the other lead to each exposed antenna terminal (UHF and VHF antenna terminals). The resistance must measure between 1M ohm and 5.2M ohm. Any resistance value below or above this range indicates an abnormality which requires corrective action.

LEAKAGE CURRENT CHECK


Plug the AC line cord directly into a 120 VAC outlet. (Do not use an isolation transformer for this check.) Use an AC voltmeter, that has 5000 ohms per volt or more sensitivity. Connect a 1500 ohm 10 watt resistor, paralleled by a 0.15 μF 150 VAC capacitor, between a known good earth ground (water pipe, conduit, etc.) and all exposed metal parts of the cabinet (antennas, handle bracket, metal cabinet, screw heads, metal overlays, control shafts, etc.). Measure the AC voltage across the 1500 ohm resistor. The AC voltage should not exceed 750 mV. A reading exceeding 750 mV indicates that a dangerous potential exists. The fault must be located and corrected. Repeat the above test with the receiver power plug reversed.

NEVER RETURN A RECEIVER TO THE CUSTOMER WITHOUT TAKING THE NECESSARY CORRECTIVE ACTION.

PRODUCT SAFETY NOTICE

When replacing components in a receiver, always keep in mind the necessary product safety precautions. Pay special attention to the replacement of components marked with a \triangle in the parts list and in the schematic diagrams. To ensure safe product operation, it is necessary to replace those components with the exact same PARTS.

READING SHOULD NOT EXCEED 750 mV.
AC VOLTMETER
(5000 ohms per volt or more sensitivity)

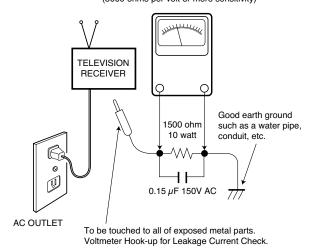

SERVICING ELECTROSTATICALLY SENSATIVE DEVICES

Semiconductors (solid-state devices) that can be damaged by static electricity are referred to as Electrostatically Sensitive (ES) devices. Examples of typical ES devices are: Integrated Circuits (IC), Field-Effect Transistors (FET), and "chip" components. The following techniques should be observed strictly, to reduce the occurrence of semiconductor damage due to electrostatic discharge.

- Immediately prior to handling any semiconductor component or an assembly containing a semiconductor device or devices, discharge the electrostatic buildup on your body by touching a known earth ground. You may also obtain and wear a commercially available discharging wrist strap device.
 - CAUTION: Be sure to remove the wrist strap before applying power to any unit being serviced.
- After removing an ES equipped assembly, place it on a conductive surface, such as, aluminum foil, to prevent buildup or exposure to static electricity.
- Use only grounded-tip soldering irons to solder or unsolder ES devices.
- Use only anti-static solder removal devices. Some suction-type devices can generate static electricity adequate to damage ES devices.
- 5. A replacement ES device will come packaged in protective material (conductive foam, aluminum foil, or some comparable conductive material). Do Not remove an ES device from its protective packaging unless you are prepared to install it immediately.
- 6. Precisely prior to removing an ES device from its protective packaging, touch the protective packaging to the chassis or assembly in which the device will be installed.
 - CAUTION: Be sure that no power is applied to the chassis or circuit assembly.
- Incidental body movements, such as, lifting a foot from a carpeted floor or the rubbing of fabric together can generate static electricity sufficient to damage ES devices. Therefore, minimize all body movements while handling exposed (unpackaged) ES devices.

SERVICE ADJUSTMENTS

GENERAL

This set has an On-screen Service Menu system included in the CPU that allows remote operation for most of the service adjustments.

ON-SCREEN SERVICE MENU SYSTEM

1. Enter the Service Menu:

- Turn off the receiver and disconnect the AC power supply.
- While pressing the Volume (–) button on the television, reconnect the AC power supply. The Service
 Menu will now appear. The remote can now be used to make adjustments. See Figure 1 below.

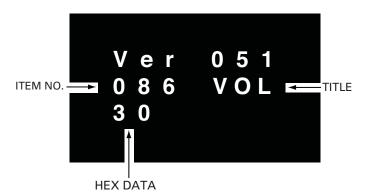



Figure 1. Service Menu Display


2. Service Adjustments:

- Press the Channel ▲ or ▼ key to select the desired service menu item you want to adjust. See page 4 for the On-screen Service Menu.
- Use the Volume + or key to adjust the data.
 The + or keys will increase or decrease the data sequentially.

3. Exit from the Service Menu:

 Press the MENU key to turn off the Service Menu display.

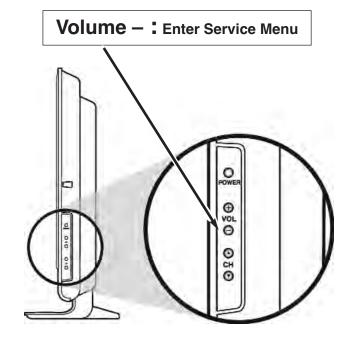

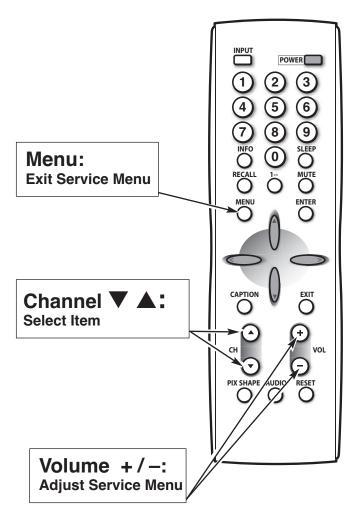

ON-SCREEN SERVICE MENU

Table 1. ON-SCREEN SERVICE MENU

When IC802 (EEPROM) is replaced, check the bus data to confirm they are the same as below. See page 3 for On-Screen Service Menu access and adjustments.

No.	Title	Initial Data	Note
086	VOL	30h	Volume setup inspection
087	OP1	10h	Option 1 Data (HDMI)
088	OP2	0Dh	Option 2 Data (Display Panel)
101	1R00	00h	ROM Correction Data
102	1R02	00h	ROM Correction Data
\	J	↓	↓
197	2R47	00h	ROM Correction Data
198	2R48	00h	ROM Correction Data

PROGRAM CODES

The microprossesor used in this model is a multi-purpose type and is used in several different models. To ensure proper operation and the correct features for your particular model, the program codes must be correct.

Note 1. Option Data 1 (NO. 087 OP1) should be hexadecimal 10. See 087 above. If this program code is wrong the TV will not operate properly.

Note 2. Option Data 2 (NO. 088 OP2) should be hexadecimal 0D. See 088 above. If this program code is wrong the TV will not operate properly.

POWER FAILURE CIRCUIT

This unit is equipped with a Power Failure Detector function included in the CPU which checks for an abnormal condition in the chassis power supplies.

If, while the power is on, a failure is caused by any of the following that results in a low voltage supply, the CPU will turn the unit off in 1.5 seconds to prevent further damage:

- Failure within the power supply circuits.
- A short circuit in the load side from the supply.
- 1. **Power Failure 1:** Detected voltage failure for analog and digital circuits. (Connected to IC801 pin 32.)
- 2. **Power Failure 2**: Detected voltage failure for LVDS. (Connected to IC801 pin 36.)


(Normal: High; Failure: Low)

If, while the power is off, the power is switched on and any of these failures remains uncorrected, the CPU will shut off the power within three seconds.

Check the following if the unit is turned off by the power failure detector.

- Disconnect the AC power cord (120V AC line) for at least 10 seconds.
- 2. Connect a DC Voltmeter to the circuits shown below.
- Press the Power key and check for the proper voltage supplies.
- 4. If any of these voltages is low, the power failure detector should turn the unit off within three seconds.
- 5. Check all circuits shown below.

Note: This unit is equipped with a Power Surge Protection feature included in the CPU. If power failure occurs three times within 15 minutes, the CPU will stop functioning automatically to help prevent secondary damage. (TV will not turn on by pressing the power key.) To reset the operating programs within the CPU, disconnect the AC power cord for at least 10 seconds.

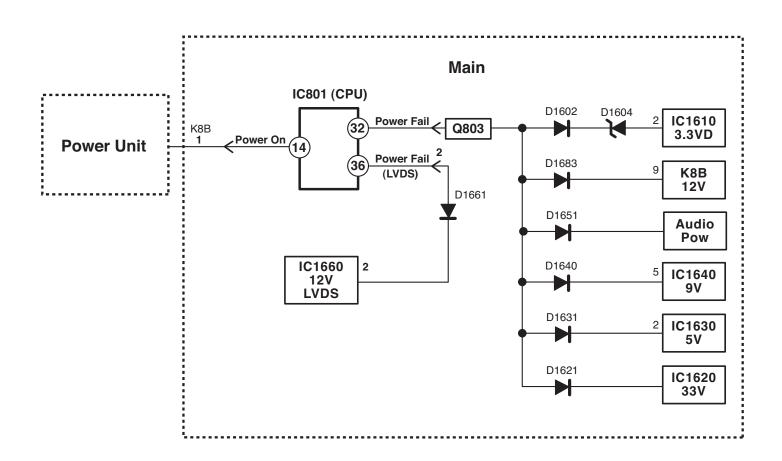


MECHANICAL DISASSEMBLY

ATTENTION

- This LCDTV uses several different kinds of screws. Using the **correct screw** is required to prevent damage.
- The **gaskets** are provided to prevent interference to other radio and television receivers. The gaskets must be returned to their previous positions after servicing.
- Lead wires must be redressed to previous positions after servicing.


STAND REMOVAL

Position TV face down on a padded or cushioned surface to protect the screen and finish. Remove 4 screws (6X18) and remove stand.

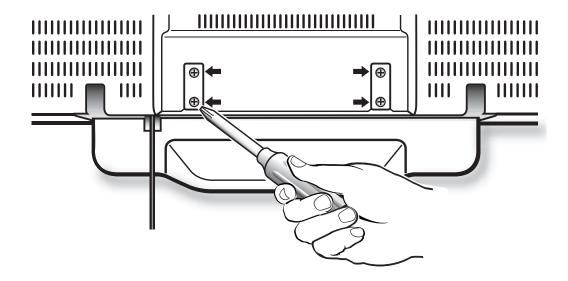


BACK CABINET REMOVAL

Remove 10 screws to take the cabinet back off. (A:4X14, 9pcs; B:4X8, 1pc;)

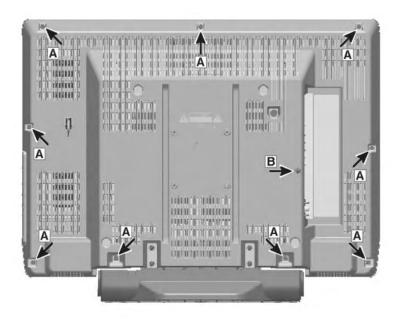

BOARD AND SPEAKER REMOVAL

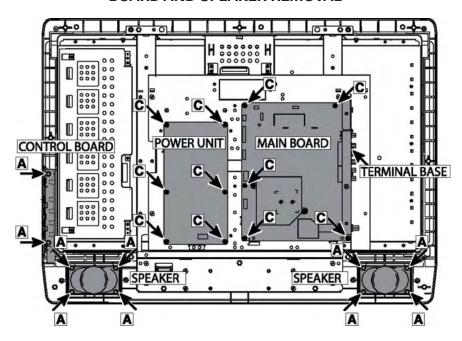

1: Main Board Removal

Remove 5 screws (C:3X6) to take the main board off

2: Power Unit Removal

Remove 6 screws (C:3X6) to take the power unit off.

3: Control Board Removal


Remove 2 screws (A:4X14) to take the control board off.

4: Speakers Removal

Remove 4 screws (A:4X14) to remove each speaker.

LCD panel removal Removal

- 1. Disonnect the lead wires from LCD panel, speakers, and control board.
- 2. Remove 7 screws (A:4X14) to take the mounting frames with chassis plate, power unit, and main board off.
- 3. Lift the LCD panel from the front cabinet.

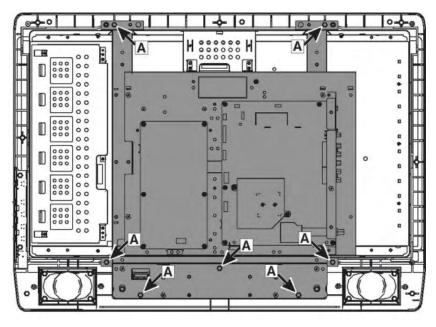

CHASSIS ELECTRICAL PARTS LIST

CAUTION: To Protect against electrical shock and for continued product safety, refer to SAFETY PRECAUTIONS, and PRODUCT SAFETY NOTICE on Page 2.

PRODUCT SAFETY NOTICE


PRODUCT SAFETY SHOULD BE CONSIDERED WHEN A REPLACEMENT IS MADE IN ANY AREA OF A RECEIVER. COMPONENTS INDICATED BY A 🛦 IN THIS PARTS LIST AND THE SCHEMATIC DIAGRAM DESIGNATE COMPONENTS IN WHICH SAFETY CAN BE OF SPECIAL SIGNIFICANCE. IT IS PARTICULARLY RECOMMENDED THAT ONLY PARTS DESIGNATED ON THE FOLLOWING PARTS LIST BE USED FOR COMPONENT REPLACEMENT DESIGNATED BY A $ilde{\Lambda}$. NO DEVIATIONS FROM RESISTANCE, WATTAGE, AND VOLTAGE RATINGS MAY BE MADE FOR REPLACEMENT ITEMS DESIGNATED BY A A.

Note: Schematic part location numbers may not always match with the part descriptions. The part descriptions are correct and should be used.

CAPACITORS

NOTES:

Read description of the Capacitor as follows:

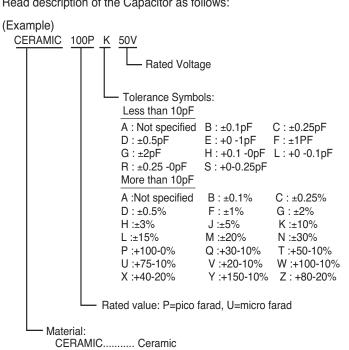


MT-PAPER...... Metallized Paper POLYESTER..... Polyester MT-POLYEST.....Metallized Polyester POLYPRO...... Polypropylene MT-POLYPRO.... Metallized Polypropylene COMPO FILM..... Composite Film MT-COMPO...... Metallized Composite STYRENE..... Styrene TA-SOLID...... Tantalum Solid AL-SOLID...... Aluminium Solid ELECT..... Electrolytic NP-ELECT...... Non-polarised Electrolytic OS-SOLID...... Aluminium Solid with Organic Semiconductive Electrolytic

RESISTORS

NOTES:

Read description of the Resistor as follows:

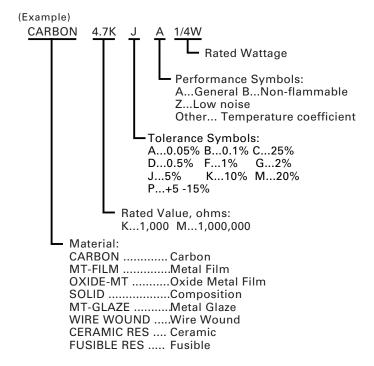

CAPACITORS C800 RGFR000ZTCANL MT-GLAZE C001 CPXLB1C100YAN NP-ELECT 10U M 16V C804 RGF1003JTCANL MT-GLAZE CPXLB1C100ZAN NP-ELECT 10U M 16V C805 CC1H220JLZCNG CERAMIC C002 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C806 CC1H220JLZCNG CERAMIC C006 CEXLB1H4R7VDN ELECT 4.7U M 50V C811 CK1H104ZLZFNG CERAMIC C007 CEXLB1V470VDN ELECT 47U M 35V C813 CEXLB1V470VDN ELECT C008 CK1H102KLZBNG CERAMIC 1000P K 50V C814 CK1H222KLZBNG CERAMIC C009 CK1H104ZLZFNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC C011 CK1H104ZLZFNG CERAMIC 0.1U Z 50V	0.000 ZA 100K JA 22P J 22P J 0.01U Z 47U M 47U M 2200P K 22P J 0.01U Z 47P J	
C001 CPXLB1C100YAN CPXLB1C100YAN NP-ELECT 10U M 16V C804 RGF1003JTCANL MT-GLAZE MT-GLAZE C002 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C805 CC1H220JLZCNG CERAMIC CERAMIC C006 CEXLB1H4R7VDN ELECT 4.7U M 50V C807 CK1H103ZLZFNG CERAMIC CERAMIC C007 CEXLB1V470VDN ELECT 4.7U M 50V C811 CK1H104ZLZFNG CERAMIC CEXLB1V470VDN ELECT 47U M 35V C813 CEXLB1V470VDN ELECT ELECT CEXLB1V470WAN ELECT CEXLB1WAT0WAN ELECT CEXLB1WAT0WAN ELECT CEXLB1WAT0WA	22P J 22P J 0.01U Z 0.1U Z 47U M 47U M 2200P K 22P J 22P J 0.01U Z	50V 50V 50V 50V 35V 35V 50V 50V
CPXLB1C100ZAN NP-ELECT 10U M 16V C805 CC1H220JLZCNG CERAMIC C002 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C806 CC1H220JLZCNG CERAMIC C006 CEXLB1H4R7VDN ELECT 4.7U M 50V C807 CK1H103ZLZFNG CERAMIC CEXLB1H4R7WAN ELECT 4.7U M 50V C811 CK1H104ZLZFNG CERAMIC C007 CEXLB1V470VDN ELECT 47U M 35V C813 CEXLB1V470VDN ELECT CEXLB1V470WAN ELECT 47U M 35V CEXLB1V470WAN ELECT C008 CK1H102KLZBNG CERAMIC 1000P K 50V C814 CK1H22ZKLZBNG CERAMIC C009 CK1H102KLZBNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	22P J 0.01U Z 0.1U Z 47U M 47U M 2200P K 22P J 22P J 0.01U Z	50V 50V 50V 35V 35V 50V 50V
C002 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C806 CC1H220JLZCNG CERAMIC C006 CEXLB1H4R7VDN ELECT 4.7U M 50V C807 CK1H103ZLZFNG CERAMIC C007 CEXLB1H4R7WAN ELECT 4.7U M 50V C811 CK1H104ZLZFNG CERAMIC C007 CEXLB1V470VDN ELECT 47U M 35V C813 CEXLB1V470VDN ELECT C008 CK1H102KLZBNG CERAMIC 1000P K 50V C814 CK1H222KLZBNG CERAMIC C009 CK1H102KLZBNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	0.01U Z 0.1U Z 47U M 47U M 2200P K 22P J 22P J 0.01U Z	50V 50V 35V 35V 50V 50V 50V
C006 CEXLB1H4R7VDN ELECT 4.7U M 50V C807 CK1H103ZLZFNG CERAMIC C007 CEXLB1H4R7WAN ELECT 4.7U M 50V C811 CK1H104ZLZFNG CERAMIC C007 CEXLB1V470VDN ELECT 47U M 35V C813 CEXLB1V470VDN ELECT C008 CK1H102KLZBNG CERAMIC 1000P K 50V C814 CK1H222KLZBNG CERAMIC C009 CK1H102KLZBNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	0.1U Z 47U M 47U M 2200P K 22P J 22P J 0.01U Z	50V 35V 35V 50V 50V
CEXLB1H4R7WAN ELECT 4.7U M 50V C811 CK1H104ZLZFNG CERAMIC C007 CEXLB1V470VDN ELECT 47U M 35V C813 CEXLB1V470VDN ELECT CEXLB1V470WAN ELECT 47U M 35V CEXLB1V470WAN ELECT C008 CK1H102KLZBNG CERAMIC 1000P K 50V C814 CK1H22ZKLZBNG CERAMIC C009 CK1H102KLZBNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	47U M 47U M 2200P K 22P J 22P J 0.01U Z	35V 35V 50V 50V 50V
C007 CEXLB1V470VDN ELECT 47U M 35V C813 CEXLB1V470VDN ELECT C008 CK1H102KLZBNG CERAMIC 1000P K 50V C814 CK1H222KLZBNG CERAMIC C009 CK1H102KLZBNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	47U M 2200P K 22P J 22P J 0.01U Z	35V 50V 50V 50V
CEXLB1V470WAN ELECT 47U M 35V CEXLB1V470WAN ELECT C008 CK1H102KLZBNG CERAMIC 1000P K 50V C814 CK1H222KLZBNG CERAMIC C009 CK1H102KLZBNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	2200P K 22P J 22P J 0.01U Z	50V 50V 50V
C008 CK1H102KLZBNG CERAMIC 1000P K 50V C814 CK1H222KLZBNG CERAMIC C009 CK1H102KLZBNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	22P J 22P J 0.01U Z	50V 50V
C009 CK1H102KLZBNG CERAMIC 1000P K 50V C815 CC1H220JLZCNG CERAMIC C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	22P J 0.01U Z	50V
C010 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C816 CC1H220JLZCNG CERAMIC	0.01U Z	
CO11 CK1H10A7L7ENG CEDAMIC 0.11L7 EOV C820 CK1H1037L7ENG CERAMIC		50V
OUTT ONTHTOACLERING GENAINTO U.TU Z DUV 0020 ONTHTOACLERING GENAINTO	47P J	
CO13 CPXLB1C100YAN NP-ELECT 10U M 16V C825 CC1H470JLZCNG CERAMIC		50V
CPXLB1C100ZAN NP-ELECT 10U M 16V C826 CK1H104ZLZFNG CERAMIC	0.1U Z	50V
C015 CEXLB1C222VDN ELECT 2200U M 16V C827 CK1H104ZLZFNG CERAMIC	0.1U Z	50V
C016 CEXLB1H100VDN ELECT 10U M 50V C829 CK1H104ZLZFNG CERAMIC	0.1U Z	50V
CEXLB1H100WAN ELECT 10U M 50V C834 CEXLB0J221VDN ELECT	220U M	6.3V
CO17 CEXLB1H100VDN ELECT 10U M 50V CEXLB0J221WAN ELECT	220U M	6.3V
CEXLB1H100WAN ELECT 10U M 50V C835 CK1H104ZLZFNG CERAMIC	0.1U Z	50V
CO18 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C836 CC1H120JLZCNG CERAMIC	12P J	50V
CO19 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C837 CC1H120JLZCNG CERAMIC	12P J	50V
C684 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C839 CK1H103ZLZFNG CERAMIC	0.01U Z	50V
C688 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C840 CK1H333KLZBNG CERAMIC	0.033U K	50V
C691 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C841 CEXLB1H2R2VDN ELECT	2.2 U M	50V
C694 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H2R2WAN ELECT	2.2U M	50V
C697 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C842 CK1H104ZLZFNG CERAMIC	0.1U Z	50V
C698 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1000 CK1H104ZLZFNG CERAMIC	0.1U Z	50V
C701 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1001 CEXLB1H100VDN ELECT	10U M	50V
C702 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H100WAN ELECT	10U M	50V
C703 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1002 CEXLB1H100VDN ELECT	10U M	50V
C704 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H100WAN ELECT	10U M	50V
C705 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1003 CEXLB1H4R7VDN ELECT	4.7U M	50V
C706 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	50V
C707 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1004 CEXLB1H4R7VDN ELECT	4.7U M	50V
C708 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	
C709 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1011 CEXLB1H4R7VDN ELECT	4.7U M	50V
C710 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	50V
C711 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1012 CEXLB1H4R7VDN ELECT	4.7U M	50V
C712 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	50V
C713 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1013 CEXLB1H4R7VDN ELECT	4.7U M	50V
C714 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	50V
C715 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1014 CEXLB1H4R7VDN ELECT	4.7U M	50V
C716 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	50V
C717 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1015 CEXLB1H4R7VDN ELECT	4.7U M	50V
C718 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	50V
C719 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1016 CEXLB1H4R7VDN ELECT	4.7U M	50V
C720 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	50V
C721 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1017 CEXLB1H4R7VDN ELECT	4.7U M	50V
C722 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1H4R7WAN ELECT	4.7U M	50V
C723 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1201 CEXLB1V470VDN ELECT	47U M	35V
C724 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1V470WAN ELECT	47U M	35V
C725 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1202 CK1H104ZLZFNG CERAMIC	0.1U Z	50V
C726 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1205 CEXLB1V470VDN ELECT	47U M	35V
C727 CK1H104ZLZFNG CERAMIC 0.1U Z 50V CEXLB1V470WAN ELECT	47U M	35V
C728 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1251 CK1H104ZLZFNG CERAMIC	0.1U Z	50V
C729 CK1H104ZLZFNG CERAMIC 0.1U Z 50V C1600 CEXLB1E102VDN ELECT	1K U M	25V

Schematic Location	Part No.	De	escription]	Schematic Location	Part No.	De	escription	
C1601	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C3210	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1603	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C3211	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1604	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C3212	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1606	CEXLB0J102VDN	ELECT	1000U M	6.3V		C3213	CK1A105ZLZFNG	CERAMIC	1U Z	10V
	CEXLB0J102WAN	ELECT	1000U M	6.3V		C3214	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1610	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C3215	CK1H222KLZBNG	CERAMIC	2200P K	50V
C1611	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C3216	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1613	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C3218	CK1C224KLZBNG	CERAMIC	0.22U K	16V
C1614	CEXLB0J221VDN	ELECT	220U M	6.3V		C3219	CK1A105ZLZFNG	CERAMIC	1U Z	10V
	CEXLB0J221WAN	ELECT	220U M	6.3V		C3220	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1615	CEXLB0J221VDN	ELECT	220U M	6.3V		C3221	CK1A105ZLZFNG	CERAMIC	1U Z	10V
	CEXLB0J221WAN	ELECT	220U M	6.3V		C3222	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1618	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C3223	CEXLB1C222VDN	ELECT	2200U M	16V
C1619	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5503	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1620	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5507	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1621	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C5508	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1622	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C5509	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1623	CEXLB1H100VDN	ELECT	10U M	50V		C5510	CK1A105ZLZFNG	CERAMIC	1U Z	10V
04000	CEXLB1H100WAN	ELECT	10U M	50V		C5511	CEXLB1H100VDN	ELECT	10U M	50V
C1630	CEXLB1C101VDN	ELECT	100U M	16V		05540	CEXLB1H100WAN	ELECT	10U M	50V
04004	CEXLB1C101WAN	ELECT	100U M	16V		C5512	CEXLB1H100VDN	ELECT	10U M	50V
C1631	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		05540	CEXLB1H100WAN	ELECT	10U M	50V
C1632	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5513	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1633	CEXLBOJ102VDN	ELECT	1000U M	6.3V		C5515	CC1H470JLZCNG	CERAMIC	47P J	50V
01604	CEXLBOJ102WAN	ELECT	1000U M	6.3V 10V		C5516 C5517	CC1H470JLZCNG	CERAMIC	47P J	50V 50V
C1634 C1640	CK1A105ZLZFNG CEXLB1C101VDN	CERAMIC ELECT	1U Z 100U M	16V		C5517 C5518	CK1H104ZLZFNG CEXLB1H100VDN	CERAMIC ELECT	0.1U Z 10U M	50V 50V
61040	CEXLB1C101VDN	ELECT	1000 M	16V		00010	CEXLB1H100WAN	ELECT	100 M	50V
C1641	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5519	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1642	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5520	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V
C1643	CEXLB1C101VDN	ELECT	100U M	16V		C5521	CEXLB1H100VDN	ELECT	10U M	50V
01010	CEXLB1C101WAN	ELECT	100U M	16V		00021	CEXLB1H100WAN	ELECT	10U M	50V
C1653	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5522	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1660	CEXLB1V471WAN	ELECT	470U M	35V		C5523	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1661		CERAMIC	0.1U Z	50V		C5529	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1662	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V		C5531	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1663	CC1H470JLZCNG	CERAMIC	47P J	50V		C5532	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1664	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V		C5534	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1665	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5535	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1666	CEXLB1E102VDN	ELECT	1K U M	25V		C5536	CEXLB0J221VDN	ELECT	220U M	6.3V
C1667	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V			CEXLB0J221WAN	ELECT	220U M	6.3V
C1800	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5539	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1801	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5540	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1903	CEXLB1V470VDN	ELECT	47U M	35V		C5541	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB1V470WAN	ELECT	47U M	35V		C5542	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1904	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5543	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1905	CC1H470JLZCNG	CERAMIC	47P J	50V		C5544	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3200	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C5545	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3201	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C5546	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3202	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C5547	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3203	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C5548	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3204	CK1H223KLZBNG	CERAMIC	0.022U K	50V		C5549	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3205	CK1H222KLZBNG	CERAMIC	2200P K	50V		C5550	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3206	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5551	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3208	CK1A105ZLZFNG	CERAMIC	1U Z	10V		C5552	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3209	CK1A105ZLZFNG	CERAMIC	1U Z	10V						

Schematic Location	Part No.	De	scription		Schematic Location	Part No.	De	escription	
C5553	CEXLB1V470VDN	ELECT	47U M	35V	C5808	CK1C224KLZBNG	CERAMIC	0.22U K	16V
	CEXLB1V470WAN	ELECT	47U M	35V	C5809	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5554	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5812	CC1H120JLZCNG	CERAMIC	12P J	50V
C5555	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5813	CC1H150JLZCNG	CERAMIC	15P J	50V
C5557	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5814	CC1H270JLZCNG	CERAMIC	27P J	50V
C5558	CK1H102KLZBNG	CERAMIC	1000P K	50V	C5815	CC1H680JLZCNG	CERAMIC	68P J	50V
C5559	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5816	CK1C224KLZBNG	CERAMIC	0.22U K	16V
C5560	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5901	CK1A474KLZBNG	CERAMIC	0.47U K	10V
C5561	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC CERAMIC	0.1U Z 0.1U Z	50V 50V	C5904	CK1H104ZLZFNG CEXLB1H100VDN	CERAMIC ELECT	0.1U Z 10U M	50V 50V
C5562 C5563	CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V	C5905 C5905	CEXLB1H100VDN	ELECT	100 M	50V
C5564	CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V	C5959	CC1H12OJLZCNG	CERAMIC	12P J	50V
C5565	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6051	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5566	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6052	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5567	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6053	CEXLB0J221VDN	ELECT	220U M	6.3V
C5568	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	00000	CEXLB0J221WAN	ELECT	220U M	6.3V
C5570	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6054	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5572	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6086	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5573	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6087	CEXLB1V470VDN	ELECT	47U M	35V
C5574	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB1V470WAN	ELECT	47U M	35V
C5575	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C6090	CEXLB0J221VDN	ELECT	220U M	6.3V
C5576	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB0J221WAN	ELECT	220U M	6.3V
C5580	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6091	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5581	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6094	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5582	CK0J106KGMBNG	CERAMIC	10U K	6.3V	C6099	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5583	CK0J106KGMBNG	CERAMIC	10U K	6.3V	C6100	CC1H180JLZCNG	CERAMIC	18P J	50V
C5701	CEXLB1V470VDN	ELECT	47U M	35V	C6101	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
05700	CEXLB1V470WAN	ELECT	47U M	35V	C6102	CC1H180JLZCNG	CERAMIC	18P J	50V
C5702	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6103	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5703	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V	C6104	CK1H104ZLZFNG CC1H560JLZCNG	CERAMIC CERAMIC	0.1U Z 56P J	50V 50V
C5704 C5705	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC CERAMIC	0.1U Z 0.1U Z	50V 50V	C6106 C6108	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5705	CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V	C6110	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V
C5707	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6114	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V
C5708	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6116	CK1H103ZLZFNG	CERAMIC	0.01U Z	
C5709	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6118	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5721	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V	C6120	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5722	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6122	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5724	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6124	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V
C5725	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6126	CEXLB0J102VDN	ELECT	1000U M	6.3V
C5726	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB0J102WAN	ELECT	1000U M	6.3V
C5727	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6128	CEXLB0J221VDN	ELECT	220U M	6.3V
C5728	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB0J221WAN	ELECT	220U M	6.3V
C5729	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6130	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5751	CEXLB1V470VDN	ELECT	47U M	35V	C6132	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB1V470WAN	ELECT	47U M	35V	C6134	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5752	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6138	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5753	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6140	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5754	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6142	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5755	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6144	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5801	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6151	CC1H220JLZCNG	CERAMIC	22P J	50V
C5803	CC1H12OJLZCNG	CERAMIC	12P J	50V	C6153	CC1H220JLZCNG	CERAMIC	22P J	50V
C5804	CC1H150JLZCNG	CERAMIC	15P J	50V	C6155	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5805	CC1H270JLZCNG	CERAMIC	27P J	50V	C6156 C6158	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC CERAMIC	0.1U Z 0.1U Z	50V 50V
C5806 C5807	CC1H680JLZCNG CK1C224KLZBNG	CERAMIC CERAMIC	68P J 0.22U K	50V 16V	C6160	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V 50V
03007	UN IUZZ4NLZDINU	OLIMINIO	U.ZZU N	101	00100	OKTITIO4ZEZFING	ULIMINIU	0.10 2	JU V

Schematic Location	Part No.	De	escription		Schematic Location	Part No.	D	escription	
C6162	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6253	CEXLB1H4R7VDN	ELECT	4.7U M	50V
C6170	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB1H4R7WAN	ELECT	4.7U M	50V
C6171	CEXLB0J221VDN	ELECT	220U M	6.3V	C6254	CK1A474KLZBNG	CERAMIC	0.47U K	10V
	CEXLB0J221WAN	ELECT	220U M	6.3V	C6255	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
C6172	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6256	CK1H123KLZBNG	CERAMIC	0.012U K	50V
C6174	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6257	CK1H562KLZBNG	CERAMIC	5600P K	50V
C6176	CEXLB0J102VDN	ELECT	1000U M	6.3V	C6258	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
	CEXLB0J102WAN	ELECT	1000U M	6.3V	C6259	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
C6177	CEXLB1H100VDN	ELECT	10U M	50V	C6260	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
	CEXLB1H100WAN	ELECT	10U M	50V	C6261	CK1H272KLZBNG	CERAMIC	2700P K	50V
C6178	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6262	CK1H473KLZBNG	CERAMIC	0.047U K	50V
C6180	CK1H102KLZBNG	CERAMIC	1000P K	50V	C6263	CT1A3R3KDRANG	TA-SOLID	3.3U K	10V
C6181	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6264	CK1H472KLZBNG	CERAMIC	4700P K	50V
C6201	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6266	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
C6202	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6267	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C6203	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C6268	CT1A100KDRANG	TA-SOLID	10U K	10V
C6204	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6271	CEXLB1H100VDN	ELECT	10U M	50V
C6205	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB1H100WAN	ELECT	10U M	50V
C6206	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C6272	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6207	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V	C6273	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6208	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6274	CEXLB1H100VDN	ELECT	10U M	50V
C6209	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB1H100WAN	ELECT	10U M	50V
C6211	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C6276	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6212	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6277	CEXLB1H100VDN	ELECT	10U M	50V
C6213	CK1H473KLZBNG	CERAMIC	0.047U K	50V	00277	CEXLB1H100WAN	ELECT	10U M	50V
C6214	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C6278	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C6215	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V	C6279	CK1H472KLZBNG	CERAMIC	4700P K	50V
C6216	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C6281	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6217	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6282	CEXLB1H100VDN	ELECT	10U M	50V
C6218	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	00202	CEXLB1H100WAN	ELECT	10U M	50V
C6219	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6283	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C6221	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6284	CK1H472KLZBNG	CERAMIC	4700P K	50V
C6230	CEXLB0J221VDN	ELECT	220U M	6.3V	C6291	CEXLB1H4R7VDN	ELECT	4.7U M	50V
00200	CEXLB0J221WAN	ELECT	220U M	6.3V	00201	CEXLB1H4R7WAN	ELECT	4.7U M	50V
C6231		CERAMIC	22P J		C6292	CEXLB1H4R7VDN	-	4.7U M	50V
C6232	CC1H220JLZCNG	CERAMIC	22P J	50V	00202	CEXLB1H4R7WAN	ELECT	4.7U M	50V
C6233	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6301	CC1H471JLZCNG	CERAMIC	470P J	50V
C6234	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6302	CC1H151JLZCNG	CERAMIC	150P J	50V
C6235	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6305	CC1H151JLZCNG	CERAMIC	150P J	50V
C6236	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6306	CC1H151JLZCNG	CERAMIC	150P J	50V
C6237	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6321	CC1H471JLZCNG	CERAMIC	470P J	50V
C6238	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6322	CC1H151JLZCNG	CERAMIC	150P J	50V
C6239	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6325	CC1H151JLZCNG	CERAMIC	150P J	50V
C6241	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6326	CC1H151JLZCNG	CERAMIC	150P J	50V
C6242	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6341	CEXLB1C101VDN	ELECT	100U M	16V
C6243	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	00341	CEXLB1C101WAN	ELECT	1000 M	16V
C6244	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6342	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6245	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C6343	CC1H471JLZCNG	CERAMIC	470P J	50V
C6245	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V 50V	C6344		ELECT	220U M	6.3V
					00344	CEXLBOJ221VDN			
C6250	CEXLB1H4R7VDN	ELECT	4.7U M	50V	C6254	CEXLBOJ221WAN	ELECT	220U M	6.3V
CCOE1	CEXLB1H4R7WAN	ELECT	4.7U M	50V	C6354	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6251	CEXLB1H100VDN	ELECT	10U M	50V	C6355	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
CCCEC	CEXLB1H100WAN	ELECT	10U M	50V	C6361	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C6252	CEXLB1C101VDN	ELECT	100U M	16V	C6362	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB1C101WAN	ELECT	100U M	16V	C6363	CEXLB1H4R7VDN	ELECT	4.7U M	50V
						CEXLB1H4R7WAN	ELECT	4.7U M	50V

Schematic Location	Part No.	Des	scription			Schematic Location	Part No.	Description
C6364	CEXLB0J221VDN	ELECT	220U M	6.3V	ı	IC1251	QCD4052BNSR-P	IC CD4052BNSR
	CEXLB0J221WAN	ELECT	220U M	6.3V			QTC4052BFP	IC TC4052BF-EL
C6365	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC1600	QLA5774MPEP	IC LA5774MP-DL-E
C6500	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC1610	QPQ070XNA1ZPP	IC PQ070XNA1ZPH
C6501	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC1620	QXXAVC830P	IC PQ6CU12X2APQ
C6506	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC1630	QPQ1CZ41H2FPK	IC PQ1CZ41H2FPH
C6507	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC1640	QXXAVC692P	IC PQ1LAX95MSPQ
C6508	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC1660	QLA5774MPEP	IC LA5774MP-DL-E
C6509	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC3200	QNJW1142AVP	IC NJW1142AV
C6510	CEXLB0J221VDN	ELECT	220U M	6.3V		IC5500	QXXAVC847M	IC ZR39660BGCG-B3
C6510	CEXLB0J221WAN	ELECT	220U M	6.3V		IC5700	QXXAVC524M	IC EDD1216AATA-6B-E
C6511	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC5720	QXXAVC524M	IC EDD1216AATA-6B-E
C6512	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC5750	QXXAAJQ0788	IC S29GL016A90-US1D
C6513	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V			QXXAVC850M	IC S29GL016A90TFIR20
C6514	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC5900	QM51957BFPP	IC M51957BFP
C6515	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC6050	QPQ070XNA1ZPP	IC PQ070XNA1ZPH
C6516	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC6090	QPQ070XNA1ZPP	IC PQ070XNA1ZPH
C6517	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC6100	QCAS-220/CM	IC CAS-220/C
C6518	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC6130	QTC7S08FUP	IC TC7S08FU (TE85L)
C6551	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V			QTC7SZ08FUP	IC TC7SZ08FU
C6560	RGFR000ZTCANL	MT-GLAZE	0.000 ZA	1/10W		IC6200	QXXAVC650M	IC ISL98001CQZ-140
C6561	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC6250	QCXA2207NP	IC CXA2207N-T6
C6562	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC6270	QXXAVC859P	IC WM8738GED/RV
C6565	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V		IC6300	QNJM4558MP	IC NJM4558M-TE2
						IC6301	QCD4052BNSR-P	IC CD4052BNSR
	DIODES						QTC4052BFP	IC TC4052BF-EL
D801	DD1SS355G	DIODE 1SS3	55 TE-17			IC6502	QXXAVC848J	IC TMDS341APFCR
D802	DZUDZS6.2BG	ZENER DIOD		TE-17		IC6551	QXXAVC854P	IC TC74VHC153FT (EL)
D1600	DDD1FM3G	DIODE D1FM				IC6590	QTC7SET08FU-P	IC TC7SET08FU
D1602	DD1SS355G	DIODE 1SS3	55 TE-17			IC6591	QTC7SET08FU-P	IC TC7SET08FU
D1604	DZUDZS3.0BG	ZD UDZS3.0I	B-TE-17					
D1610	DZUDZS3.9BG	ZD UDZS-TE-	-173.9B				COILS	
D1620	DDD1FH3G	DIODE D1FH	3			L001	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1621	DD1SS355G	DIODE 1SS3	55 TE-17			L002	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1630	DDD1FH3G	DIODE D1FH	3			L003	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1631	DD1SS355G	DIODE 1SS3	55 TE-17			L004	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1640	DD1SS355G	DIODE 1SS3	55 TE-17			L1000	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1651	DD1SS355G	DIODE 1SS3	55 TE-17			L1201	1AV4L2FB3R3MG	INDUCTOR, 3.3U M
D1660	DDD1FM3G	DIODE D1FM				L1202	1AV4L2FB3R3MG	INDUCTOR, 3.3U M
D1661	DD1SS355G	DIODE 1SS3	55 TE-17			L1600	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1683	DD1SS355G	DIODE 1SS3	55 TE-17			L1601	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D3216	DDRB551V-30-G	DIODE RB55		7		L1603	1AV4L2WK150MN	INDUCTOR, 15U M
D9201	DD1SS355G	DIODE 1SS3	55 TE-17			L1604	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
						L1605	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
	INTEGRATED	CIRCUITS				L1610	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC001	QLA42032-EN	IC LA42032-	E			L1611	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC801	QXXAAJQ0807	IC LC87F416	4AU-Y07LCI	D02		L1612	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
	QXXAVC883M	IC LC874164	A-58W0-E			L1614	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC802	QXXAVC820P	IC AT24C04N	I-10SU-1.8			L1615	1LB4L26B0740G	INDUCTOR, 220 OHM
	QXXAVC844P	IC CAT24C04	WI-GT3			L1616	1LB4L26B0740G	INDUCTOR, 220 OHM
	QXXGA0500017P	IC LE24C041	1M-TLM-E-0	C		L1620	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC805	QTC7SH08FUP	IC TC7SH08F	-U			L1621	1AV4L2WK560MN	INDUCTOR, 56U M
IC806	QTC7SET08FU-P	IC TC7SET08				L1630	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC1201	QCD4052BNSR-P	IC CD4052BN				L1631 L1632	RGFR000ZTAANL 1AV4L2WK560MN	MT-GLAZE 0.000 ZA 1/10W INDUCTOR, 56U M
	QTC4052BFP	IC TC4052BF	-EL			L1632 L1640	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
						L1040	HULLINGULIANIL	IVII GEALE 0.000 LA 1/10W

Schematic Location	Part No.	Description		Schematic Location	Part No.	Description
L1656	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W	_	L2009	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1657	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L2011	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1658	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L2012	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1659	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L2014	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1660	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L2015	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1661	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L2016	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1662	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L2017	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1663	1AV4L2WK680MN	INDUCTOR, 68U M		L5500	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1664	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5501	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1665	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5503	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1666	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W MT-GLAZE 0.000 ZA 1/10W		L5504 L5505	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W MT-GLAZE 0.000 ZA 1/10W
L1670 L1673	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5505 L5506	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1673	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5508	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1681	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5511	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1682	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5512	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1683	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5515	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1684	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5516	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1685	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5521	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1686	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5522	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1687	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5523	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1688	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5524	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1689	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5525	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1690	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5526	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1691	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5545	1AV4L2WK150MN	INDUCTOR, 15U M
L1692	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5553	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1693	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5565	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1694	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5566	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1695	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5751	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1696	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W MT-GLAZE 0.000 ZA 1/10W		L5800 L5801	RGFR000ZTAANL 1AV4L2GA150JG	MT-GLAZE 0.000 ZA 1/10W INDUCTOR, 15U J
L1697 L1698	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5801 L5802	1AV4L2GA150JG	INDUCTOR, 150 J
L1699	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6050	1LB4L26B0740G	INDUCTOR, 130 3
L1700	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6051	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1701	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6052	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1702	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6091	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1703	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6100	1AV4L2GAR22JG	INDUCTOR, 0.22U J
L1704	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6104	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1705	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6106	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1706	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6108	1LB4L26B0740G	INDUCTOR, 220 OHM
L1707	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6110	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1709	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6112	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1718	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6116	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1800	1AV4L2FB3R3MG	INDUCTOR, 3.3U M		L6118	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1801	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6120	1AV4L26B1940G	INDUCTOR, 120 OHM
L1802	1AV4L2FB3R3MG	INDUCTOR, 3.3U M		10400	1LB4L26B0700G	INDUCTOR, 120 OHM
L1803	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6122	1AV4L26B1940G	INDUCTOR, 120 OHM
L1901	1AV4L2B95R6KN	INDUCTOR, 5.6U K		1.6150	1LB4L26B0700G	INDUCTOR, 120 OHM
L2001	1AV4L2GU5R6KN RGFR000ZTAANL	INDUCTOR, 5.6U K MT-GLAZE 0.000 ZA 1/10W		L6150 L6151	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W MT-GLAZE 0.000 ZA 1/10W
L2001 L2002	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6151 L6153	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W MT-GLAZE 0.000 ZA 1/10W
L2002 L2003	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6154	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2003	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6155	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2004	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6156	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2007	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6157	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2008	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6158	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W

Schematic Location	Part No.	Description		Schematic Location	Part No.	Description
L6159	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W	•	L6501	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6160	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6502	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6161	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6504	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6162	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6510	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6165	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6550	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6166	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6551	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6167	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6552	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6168	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6554	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6169	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6555	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6170	1AV4L2FB3R3MG	INDUCTOR, 3.3U M		L6556	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6171	1AV4L2FB3R3MG	INDUCTOR, 3.3U M		L6557	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6172	1AV4L2FB3R3MG	INDUCTOR, 3.3U M		L6558	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6174	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6559	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6176	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6561	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6184	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6566	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6185	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6567	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6186	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6568	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6187	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6569	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6188	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				
L6189	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			TRANSISTOF	RS
L6201	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		Q101	T2SC2412K-S-P	TR 2SC2412K-T-96-S
L6202	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		QTOT	T2SC2812-L6-P	TR 2SC2812-L6-TB
L6203	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L7-P	TR 2SC2812-L7-TB
L6204	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812N-L6-TB
L6206	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				
L6210	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928A1R
L6211	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1S-P	TR 2SC3928A1S TR 2SC2412K-T-96-R
L6212	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		Q801	T2SC2412K-R-P	
L6213	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		QoUI	T2SC2412K-R-P T2SC2412K-S-P	TR 2SC2412K-T-96-R TR 2SC2412K-T-96-S
L6214	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L6-P	TR 2SC2812-L6-TB
L6215	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L7-P	TR 2SC2812-L7-TB
L6216	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812N-L6-TB
L6217	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				
L6220	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928A1R TR 2SC3928A1S
L6221	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		Q803	T2SC3928A1S-P	
L6222	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		QOUS	T2SC2412K-R-P T2SC2412K-S-P	TR 2SC2412K-T-96-R TR 2SC2412K-T-96-S
L6223	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				TR 2SC2812-L6-TB
L6224	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L6-P	
L6225	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L7-P T2SC2812N-L6P	TR 2SC2812-L7-TB TR 2SC2812N-L6-TB
L6226	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928A1R
L6227	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1S-P	TR 2SC3928A1S
L6250	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		Q804	T2SA1037AK-RP	TR 2SA1037AK T146 R
L6270	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		Q004	T2SA1037AK-NP	TR 2SA1037AK T146 K
L6271	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				TR 2SA1037AK 1140 S
L6301	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1037K-R-P	
L6354	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1037K-S-P T2SA1179-M6-P	TR 2SA1037K-T-96-S TR 2SA1179-M6
L6355	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1179-M7-P	TR 2SA1179-M7-TB
L6356	1LB4L26B0740G	INDUCTOR, 220 OHM				
L6357	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1179N-M6P	TR 2SA1179N-M6-TB
L6358	1AV4L3EK201-G	IMPEDANCE, 200 OHM			T2SA1235A1E-P	TR 2SA1235A1E
L6359	1AV4L3EK201-G	IMPEDANCE, 200 OHM			T2SA1235A1F-P	TR 2SA1235A1F
L6360	1AV4L3EK201-G	IMPEDANCE, 200 OHM				
L6393	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				
L6394	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				
L6395	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				
L6396	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				
		5				

Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
Q805	T2SC2412K-R-P	TR 2SC2412K-T-96-R	 Q1252	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S
Q1006	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q1261	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
01007	T2SC3928A1S-P T2SC2412K-R-P	TR 2SC3928A1S TR 2SC2412K-T-96-R	01060	T2SC3928A1S-P T2SC2412K-R-P	TR 2SC3928A1S
Q1007	T2SC2412K-R-P	TR 2SC2412K-T-96-S	Q1262	T2SC2412K-R-P	TR 2SC2412K-T-96-R TR 2SC2412K-T-96-S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L0-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S
Q1200	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q1600	T2SA1037AK-RP	TR 2SA1037AK T146 R
G. 200	T2SC2412K-S-P	TR 2SC2412K-T-96-S	α.σσσ	T2SA1037AK-SP	TR 2SA1037AK T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SA1037K-R-P	TR 2SA1037K-T-96-R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SA1037K-S-P	TR 2SA1037K-T-96-S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SA1179-M6-P	TR 2SA1179-M6
	T2SC3928A1R-P	TR 2SC3928A1R		T2SA1179-M7-P	TR 2SA1179-M7-TB
	T2SC3928A1S-P	TR 2SC3928A1S		T2SA1179N-M6P	TR 2SA1179N-M6-TB
Q1201	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SA1235A1E-P	TR 2SA1235A1E
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SA1235A1F-P	TR 2SA1235A1F
	T2SC2812-L6-P	TR 2SC2812-L6-TB	Q1601	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2812-L7-P	TR 2SC2812-L7-TB
01000	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812N-L6P	TR 2SC2812N-L6-TB
Q1202	T2SC2412K-R-P	TR 2SC2412K-T-96-R TR 2SC2412K-T-96-S		T2SC3928A1R-P T2SC3928A1S-P	TR 2SC3928A1R TR 2SC3928A1S
	T2SC2412K-S-P T2SC2812-L6-P	TR 2SC2812-L6-TB	Q1603	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2812-L7-P	TR 2SC2812-L7-TB	Q1003	T2SC2412K-N-P	TR 2SC2412K-T-96-S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812N-L6P	TR 2SC2812N-L6-TB
Q1203	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2812-L6-P	TR 2SC2812-L6-TB	Q1605	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812N-L6P	TR 2SC2812N-L6-TB
Q1251	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2812-L6-P	TR 2SC2812-L6-TB			
	T2SC2812-L7-P	TR 2SC2812-L7-TB			
	T2SC2812N-L6P	TR 2SC2812N-L6-TB			
	T2SC3928A1R-P	TR 2SC3928A1R			
	T2SC3928A1S-P	TR 2SC3928A1S			

Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
Q1606	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q5804	T2SA1037AK-RP	TR 2SA1037AK T146 R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SA1037AK-SP	TR 2SA1037AK T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SA1037K-R-P	TR 2SA1037K-T-96-R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SA1037K-S-P	TR 2SA1037K-T-96-S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SA1179-M6-P	TR 2SA1179-M6
	T2SC3928A1R-P	TR 2SC3928A1R		T2SA1179-M7-P	TR 2SA1179-M7-TB
	T2SC3928A1S-P	TR 2SC3928A1S		T2SA1179N-M6P	TR 2SA1179N-M6-TB
Q1661	T2SA1037AK-RP	TR 2SA1037AK T146 R		T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1037AK-SP	TR 2SA1037AK T146 S		T2SA1235A1F-P	TR 2SA1235A1F
	T2SA1037K-R-P	TR 2SA1037K-T-96-R	Q5901	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SA1037K-S-P	TR 2SA1037K-T-96-S		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SA1179-M6-P	TR 2SA1179-M6		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SA1179-M7-P	TR 2SA1179-M7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SA1179N-M6P	TR 2SA1179N-M6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SA1235A1E-P	TR 2SA1235A1E		T2SC3928A1R-P	TR 2SC3928A1R
01004	T2SA1235A1F-P	TR 2SA1235A1F	05000	T2SC3928A1S-P T2SC2412K-R-P	TR 2SC3928A1S TR 2SC2412K-T-96-R
Q1804	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q5902	T2SC2412K-R-P	
	T2SC2412K-S-P T2SC2812-L6-P	TR 2SC2412K-T-96-S TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2412K-T-96-S TR 2SC2812-L6-TB
	T2SC2812-L0-P	TR 2SC2812-L7-TB		T2SC2812-L0-P	TR 2SC2812-L0-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S
Q5545	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q6100	T2SC2412K-R-P	TR 2SC2412K-T-96-R
Q00 10	T2SC2412K-S-P	TR 2SC2412K-T-96-S	Q0100	T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S
Q5801	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q6101	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S
Q5802	T2SA1037AK-RP	TR 2SA1037AK T146 R	Q6250	T2SA1037AK-RP	TR 2SA1037AK T146 R
	T2SA1037AK-SP	TR 2SA1037AK T146 S		T2SA1037AK-SP	TR 2SA1037AK T146 S
	T2SA1037K-R-P	TR 2SA1037K-T-96-R		T2SA1037K-R-P	TR 2SA1037K-T-96-R
	T2SA1037K-S-P	TR 2SA1037K-T-96-S		T2SA1037K-S-P	TR 2SA1037K-T-96-S
	T2SA1179-M6-P	TR 2SA1179-M6		T2SA1179-M6-P	TR 2SA1179-M6
	T2SA1179-M7-P	TR 2SA1179-M7-TB		T2SA1179-M7-P	TR 2SA1179-M7-TB
	T2SA1179N-M6P	TR 2SA1179N-M6-TB		T2SA1179N-M6P	TR 2SA1179N-M6-TB
	T2SA1235A1E-P	TR 2SA1235A1E		T2SA1235A1E-P	TR 2SA1235A1E
05000	T2SA1235A1F-P	TR 2SA1235A1F	00051	T2SA1235A1F-P	TR 2SA1235A1F
Q5803	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q6251	T2SA1037AK-RP	TR 2SA1037AK T146 R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SA1037AK-SP	TR 2SA1037AK T146 S TR 2SA1037K-T-96-R
	T2SC2812-L6-P	TR 2SC2812-L6-TB TR 2SC2812-L7-TB		T2SA1037K-R-P T2SA1037K-S-P	TR 2SA1037K-T-96-K
	T2SC2812-L7-P T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SA1037K-S-P	TR 2SA1037K-1-96-5 TR 2SA1179-M6
	T2SC3928A1R-P	TR 2SC3928A1R		T2SA1179-M7-P	TR 2SA1179-M0 TR 2SA1179-M7-TB
	T2SC3928A1S-P	TR 2SC3928A1S		T2SA1179-W7-P	TR 2SA1179-W7-TB
	12000320A10-F	111 2003920A13		T2SA1235A1E-P	TR 2SA1235A1E
				T2SA1235A1F-P	TR 2SA1235A1F
				. LOTTI LOUITII I	25/11250/111

Schematic Location	Part No.	Description		Schematic Location	Part No.	De	scription	
Q6360	T2SC2412K-R-P	TR 2SC2412K-T-96-R	•	R004	RGF1801JTCANL	MT-GLAZE	1.8K JA	1/10W
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		R005	RGAR000ZTDANL	MT-GLAZE	0.000 ZA	1/2W
	T2SC2812-L6-P	TR 2SC2812-L6-TB		R006	RGAR000ZTDANL	MT-GLAZE	0.000 ZA	1/2W
	T2SC2812-L7-P	TR 2SC2812-L7-TB		R008	RGF1002JTCANL	MT-GLAZE	10K JA	1/10W
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		R014	RGB2R20JTBANL	MT-GLAZE	2.2 JA	1/4W
	T2SC3928A1R-P	TR 2SC3928A1R		R015	RGB2R20JTBANL	MT-GLAZE	2.2 JA	
	T2SC3928A1S-P	TR 2SC3928A1S		R016	RGB2R20JTBANL	MT-GLAZE	2.2 JA	1/4W
Q6362	T2SC2412K-R-P	TR 2SC2412K-T-96-R		R017	RGB2R20JTBANL	MT-GLAZE	2.2 JA	1/4W
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		R105	RGF47R0JTCANL	MT-GLAZE	47 JA	1/10W
	T2SC2812-L6-P	TR 2SC2812-L6-TB		R109	RGF4700JTCANL	MT-GLAZE	470 JA	1/10W
	T2SC2812-L7-P	TR 2SC2812-L7-TB		R110	RGFR000ZTCANL	MT-GLAZE	0.000 ZA	
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		R802	RGF4701JTCANL	MT-GLAZE	4.7K JA	1/10W
	T2SC3928A1R-P	TR 2SC3928A1R		R803	RGF4701JTCANL	MT-GLAZE	4.7K JA	
	T2SC3928A1S-P	TR 2SC3928A1S		R804	RGF1002JTCANL	MT-GLAZE	10K JA	1/10W
Q6363	TMCH6306P	TR MCH6306-TL		R807	RGF6801JTCANL	MT-GLAZE	6.8K JA	
Q6365	T2SA1037AK-RP	TR 2SA1037AK T146 R		R809	RGF4701JTCANL	MT-GLAZE	4.7K JA	
	T2SA1037AK-SP	TR 2SA1037AK T146 S		R812	RGF1000JTCANL	MT-GLAZE	100 JA	
	T2SA1037K-R-P	TR 2SA1037K-T-96-R		R814	RGFR000ZTCANL	MT-GLAZE	0.000 ZA	
	T2SA1037K-S-P	TR 2SA1037K-T-96-S		R815	RGF1000JTCANL	MT-GLAZE	100 JA	
	T2SA1179-M6-P	TR 2SA1179-M6		R816	RGF1000JTCANL	MT-GLAZE	100 JA	
	T2SA1179-M7-P	TR 2SA1179-M7-TB		R817	RGF1004JTCANL	MT-GLAZE	1M JA	
	T2SA1179N-M6P	TR 2SA1179N-M6-TB		R821	RGF1002JTCANL	MT-GLAZE	10K JA	
	T2SA1235A1E-P	TR 2SA1235A1E		R822	RGF4701JTCANL	MT-GLAZE	4.7K JA	
	T2SA1235A1F-P	TR 2SA1235A1F		R823	RGF1000JTCANL	MT-GLAZE	100 JA	
Q9201	T2SD2226K-V-P	TR 2SD2226K-T146-V		R824	RGF1000JTCANL	MT-GLAZE	100 JA	
	T2SD2226K-W-P	TR 2SD2226KT146W		R828	RGF4701JTCANL	MT-GLAZE	4.7K JA	
				R829	RGF4701JTCANL	MT-GLAZE	4.7K JA	
	RESISTORS			R830	RGF1002JTCANL	MT-GLAZE	10K JA	
RB5510	1AV4R1D31024G	R-NETWORK 1KX4 1/32W		R831	RGF4702JTCANL	MT-GLAZE	47K JA	
RB5511	1AV4R1D31024G	R-NETWORK 1KX4 1/32W		R832	RGF4702JTCANL	MT-GLAZE	47K JA	
RB5570	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R833	RGF4701JTCANL	MT-GLAZE	4.7K JA	
RB5571	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R834	RGF4701JTCANL	MT-GLAZE	4.7K JA	
RB5572	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R838	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5573	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R839	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5574	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R840	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5576	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R841	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5577	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R842	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5578	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R843	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5579	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R844	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5580	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R845	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5581	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R846	RGF1000JTCANL	MT-GLAZE	100 JA	
RB5583	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R847	RGF4701JTCANL	MT-GLAZE	4.7K JA	
RB6121	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R848	RGF4701JTCANL	MT-GLAZE	4.7K JA	
RB6122	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R849	RGF1003JTCANL	MT-GLAZE	100K JA	
RB6123	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R850	RGF1003JTCANL	MT-GLAZE	100K JA	
RB6201	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R851	RGF1003JTCANL	MT-GLAZE	100K JA	
RB6202	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R854	RGF4701JTCANL	MT-GLAZE	4.7K JA	
				R855	RGF4701JTCANL	MT-GLAZE	4.7K JA	
RB6203 RB6204	1AV4R1D33304G 1AV4R1D33304G	R-NETWORK 33X4 1/32W R-NETWORK 33X4 1/32W		R856	RGF4701JTCANL	MT-GLAZE	4.7K JA	
				R857	RGF1003JTCANL	MT-GLAZE	100K JA	
RB6205	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R858	RGF4701JTCANL	MT-GLAZE	4.7K JA	
RB6206	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R859	RGF1002JTCANL	MT-GLAZE	10K JA	
RB6355	1AV4R1D30R04G	R-NETWORK 0X4 1/32W		R860	RGF1002JTCANL	MT-GLAZE	10K JA	
RB6356	1AV4R1D30R04G	R-NETWORK 0X4 1/32W		R861	RGF1002JTCANL	MT-GLAZE	10K JA 10K JA	
R001	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W		R862	RGF1002JTCANL	MT-GLAZE	10K JA	
R002	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W		R863	RGF1002JTCANL	MT-GLAZE	100 JA	
R003	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W		ითა	NOTIOUUJIUANL	WII-GLAZE	IUU JA	1/1000

Schematic Location	Part No.	Des	scription		Schematic Location	Part No.	Des	scription
R864	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	-	R1062	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R865	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1063	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R866	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1064	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W
R867	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1065	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R868	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R1066	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R873	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R1067	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R874	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1068	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W
R875	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1069	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R883	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R1070	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R884	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R1071	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R885	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R1072	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W
R888	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1073	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W
R889	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W		R1074	RGF82R0JTCANL	MT-GLAZE	82 JA 1/10W
R890	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R1075	RGF82R0JTCANL	MT-GLAZE	82 JA 1/10W
R891	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R1200	RGF1001JTCANL	MT-GLAZE MT-GLAZE	1K JA 1/10W
R893	RGF4701JTCANL	MT-GLAZE MT-GLAZE	4.7K JA 1/10W 470K JA 1/10W		R1201	RGF47R0JTCANL RGF1002JTCANL	MT-GLAZE	47 JA 1/10W
R895 R1000	RGF4703JTCANL	MT-GLAZE	47 JA 1/10W		R1202 R1203	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W 10K JA 1/10W
R1000	RGF47R0JTCANL RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W		R1203	RGF1002JTCANL	MT-GLAZE	1K JA 1/10W
R1001	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W		R1204	RGF10013TCANL	MT-GLAZE	10K JA 1/10W
R1002	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W		R1206	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1004	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W		R1207	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1005	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W		R1208	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1006	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W		R1209	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R1007	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W		R1210	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1008	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W		R1211	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1009	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1212	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1010	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W		R1253	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1011	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W		R1254	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1012	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W		R1255	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1013	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1256	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1014	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W		R1257	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1016	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R1261	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1019	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W		R1262	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1020	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W		R1263	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1025	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W		R1264	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1026	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W		R1265	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1031	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W		R1266	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1032	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W		R1267	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1037	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W		R1269	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1038	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W		R1271 R1600	RGF1001JTCANL RGF3300FTCANL	MT-GLAZE MT-GLAZE	1K JA 1/10W 330 FA 1/10W
R1043 R1044	RGF47R0JTCANL RGF75R0JTCANL	MT-GLAZE MT-GLAZE	47 JA 1/10W 75 JA 1/10W		R1601	RGF1200FTCANL	MT-GLAZE	120 FA 1/10W
R1044	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W		R1602	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R1050	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W		R1606	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1051	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W		R1607	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1052	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W		R1608	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1053	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W		R1609	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R1054	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W		R1611	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1055	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W		R1612	RGF5600FTCANL	MT-GLAZE	560 FA 1/10W
R1056	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W		R1614	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W
R1057	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W		R1615	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W
R1058	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W		R1616	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1059	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R1617	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W
R1060	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W		R1618	RGF1201FTCANL	MT-GLAZE	1.2K FA 1/10W
R1061	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W		R1619	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W

Schematic Location	Part No.	Des	cription		Schematic Location	Part No.	De	escription
R1620	RGF2702FTCANL	MT-GLAZE	27K FA 1/10W	_	R1903	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1621	RGF1002FTCANL	MT-GLAZE	10K FA 1/10W		R1904	RGF1801JTCANL	MT-GLAZE	1.8K JA 1/10W
R1622	RGF1201FTCANL	MT-GLAZE	1.2K FA 1/10W		R1905	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R1623	RGF1203JTCANL	MT-GLAZE	120K JA 1/10W		R1906	RGF3901JTCANL	MT-GLAZE	3.9K JA 1/10W
R1624	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R1907	RGF5601JTCANL	MT-GLAZE	5.6K JA 1/10W
R1625	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W		R1909	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R1626	RGF1202JTCANL	MT-GLAZE	12K JA 1/10W		R1910	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R1629	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R1911	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1630	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W		R3200	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1631	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W		R3201	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1632	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W		R5507	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1634	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5508	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1638	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5509	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1640	RGF6801FTCANL	MT-GLAZE	6.8K FA 1/10W		R5510	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1641	RGF5602FTCANL	MT-GLAZE	56K FA 1/10W		R5513	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1642	RGF1002FTCANL	MT-GLAZE	10K FA 1/10W		R5514	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1646	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5515	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1649	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5516	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1657	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5517	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1658	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5518	RGF1501JTCANL	MT-GLAZE	1.5K JA 1/10W
R1660	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W		R5519	RGF1501JTCANL	MT-GLAZE	1.5K JA 1/10W
R1662	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R5520	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1664	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W		R5521	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R1665	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W		R5523	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1666	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5524	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1668	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5525	RGF3900FTCANL	MT-GLAZE	390 FA 1/10W
R1674	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R5527	RGF3302JTCANL	MT-GLAZE	33K JA 1/10W
R1675	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W		R5528	RGF8200FTCANL	MT-GLAZE	820 FA 1/10W
⚠ R1683	RWXAAZ2R2KKAN	WIRE WOUND			R5529	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	RWXLBZ2R2KXAL	WIRE WOUND			R5530	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R1687	RGF3302JTCANL	MT-GLAZE	33K JA 1/10W		R5531	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R1688	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W		R5532	RGF1501JTCANL	MT-GLAZE	1.5K JA 1/10W
R1800	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5538	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1802	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5540	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1803	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5542	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1804	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5544	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1805	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5545	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R1806	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5546	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1807	RGF1000JTCANL RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5547	RGF3301JTCANL RGF4701JTCANL	MT-GLAZE	3.3K JA 1/10W 4.7K JA 1/10W
R1808 R1809	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W 100 JA 1/10W		R5548 R5549		MT-GLAZE MT-GLAZE	
R1827	RGF4701JTCANL	MT-GLAZE MT-GLAZE	4.7K JA 1/10W		R5550	RGF1802JTCANL RGFR000ZTCANL	MT-GLAZE	18K JA 1/10W 0.000 ZA 1/10W
R1828	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5551	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1829	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5552	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1830	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5553	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1831	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R5555	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1832	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5556	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1835	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5557	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1838	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W		R5563	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1852	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W		R5564	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1855	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5570	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R1856	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W		R5572	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1858	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W		R5573	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1861	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5574	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1901	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W		R5575	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1902	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W		R5576	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
111002		GL/12L	11071 1/1000		110070	TO TO TO TO TO THE	WII GLACE	10 0/1 1/10 1


Schematic Location	Part No.	Des	scription	Schematic Location	Part No.	De	scription
R5577	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6086	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R5578	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6087	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R5579	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6088	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5580	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6089	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R5581	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6093	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5582	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6100	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R5583	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6101	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R5584	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6104	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W
R5585	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6106	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5588	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R6107	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5590	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6108	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5592	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6110	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R5700	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6111	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5701	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6112	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W
R5751	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6113	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5752	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6114	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R5753	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6115	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R5755	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R6117	RGF3302JTCANL	MT-GLAZE	33K JA 1/10W
R5756	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6118	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R5757	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6125	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R5758	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6126	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R5803	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6132	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R5804	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6174	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R5805	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6176	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R5807	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6200	RGF3302JTCANL	MT-GLAZE	33K JA 1/10W
R5808	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R6201	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5809	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R6204	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5813	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6208	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W
R5814	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6209	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5815	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6213	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5817	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6216	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5818	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R6221	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W
R5901	RGF1202JTCANL	MT-GLAZE	12K JA 1/10W	R6222	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5902	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6225	RGF10R0JTCANL	MT-GLAZE	10 JA 1/10W
R5903	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W	R6229	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5904	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W	R6231	RGF10R0JTCANL	MT-GLAZE	10 JA 1/10W
R5905	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R6233	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5906	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6235	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5907	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6236	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5908	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W	R6237	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5951	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6238	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5953	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6240	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5954	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6241	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5955	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6244	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5956	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6250	RGF6802FTCANL	MT-GLAZE	68K FA 1/10W
R5957	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6251	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
R5958	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6252	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R5959	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W	R6253	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R5974	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6254	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5975	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6255	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W
R5976	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6257	RGF3301JTCANL	MT-GLAZE	3.3K JA 1/10W
R6050	RGF5600FTCANL	MT-GLAZE	560 FA 1/10W	R6258	RGF3001FTCANL	MT-GLAZE	3K FA 1/10W
R6051	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W	R6260	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6052	RGF1201FTCANL	MT-GLAZE	1.2K FA 1/10W	R6261	RGF3901JTCANL	MT-GLAZE	3.9K JA 1/10W
R6053	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R6262	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R6085	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W	R6263	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
110000	INGI TI UTI TUANL	IVI I TULALL	T./ N.I.A. 1/10VV	110200	TIGI GOOGG TOAINE	IVII GLAZL	000 UA 1/10W

Schematic Location	Part No.	Des	scription
R6264	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6266	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R6267	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R6271	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6272	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6273	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R6276	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W
R6277	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6278	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6281	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R6282	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W
R6283	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R6284	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R6285	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R6286	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6287	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6300	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R6301	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6302	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6303	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6304	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6305	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6306	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6309	RGF1502FTCANL	MT-GLAZE	15K FA 1/10W
R6310	RGF1502FTCANL	MT-GLAZE	15K FA 1/10W
R6311	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6321	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6322	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6323	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6324	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6325	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6326	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6329	RGF1502FTCANL	MT-GLAZE	15K FA 1/10W
R6330	RGF1502FTCANL	MT-GLAZE	15K FA 1/10W
R6331	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6340	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R6341	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W
R6342	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W
R6343	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6346	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6348	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R6356	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6364	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6365	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6366	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R6367	RGF3902JTCANL	MT-GLAZE	39K JA 1/10W
R6369	RGF3902JTCANL	MT-GLAZE	39K JA 1/10W
R6370	RGF1504JTCANL	MT-GLAZE	1.5M JA 1/10W
R6500	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6501	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6502	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W
R6503	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W
R6504	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W
R6505	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W
R6506	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W
R6507	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W
		32/22	0.0 0.1 1/1011

Schematic Location	Part No.	Description				
R6508	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6509	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6510	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W			
R6511	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W			
R6512	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6513	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6514	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6515	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6516	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6517	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6518	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6519	RGF5R60JTCANL	MT-GLAZE	5.6 JA 1/10W			
R6520	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6523	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W			
R6525	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6526	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W			
R6527	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6531	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6532	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6533	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6534	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W			
R6535	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W			
R6536	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W			
R6547	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W			
R6548	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W			
R6550	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W			
R6551	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W			
R6552	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W			
R6553	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W			
R6554	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W			
R6556	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6557	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W			
R6558	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W			
R6559	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6573	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W			
R6574	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W			
R6575	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W			
R6577	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W			
R6578	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W			
R6580	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6581	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W			
R6582	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W			
R6583	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W			
R6591	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6593	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W			
R6594	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W			
R6596	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W			
R9201	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W			
R9202	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W			

Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
	SWITCHES		_	MISCELLANI	EOUS
SW1901	1AV4S10B0900J	SWITCH, PUSH 1P-1T	A001	1AA0B10N222C0	ASSY, PWB, MAIN-N3MG
	1AV4S10B5650J	SWITCH, PUSH 1P-1TX1	A002	1AA0B10N225B0	ASSY, PWB, CONTROL-N3MG
SW1902	1AV4S10B0900J	SWITCH, PUSH 1P-1T	A1901	1AV4U20C11701	UNIT, REMOCON RECEIVER
	1AV4S10B5650J	SWITCH, PUSH 1P-1TX1	 ⚠A6100	1AV4F1ZAZ0010	TUNER, USA/IF/DIGI-ANALOG
SW1903	1AV4S10B0900J	SWITCH, PUSH 1P-1T	⚠EL901	1AV4T40B84000	LCD (V260B1-L01 REVC1)
	1AV4S10B5650J	SWITCH, PUSH 1P-1TX1	K1003	1LB4J31B01101	TERMINAL, BOARD
SW1904	1AV4S10B0900J	SWITCH, PUSH 1P-1T	K1004	1LB4J12B11700	JACK, RCA-9
	1AV4S10B5650J	SWITCH, PUSH 1P-1TX1	K1005	1LB4J12B11600	JACK, RCA-6
SW1905	1AV4S10B0900J	SWITCH, PUSH 1P-1T	K6500	1AV4J11B8590G	SOCKET, IF (HDMI) 19P
	1AV4S10B5650J	SWITCH, PUSH 1P-1TX1	K6501	1AV4J11B8590G	SOCKET, IF (HDMI) 19P
			RL9200	1AV4S20B0460N	RELAY
				1AV4S20B0480N	RELAY
			SP901	1LB4A10B03800	SPEAKER, 8-5W
	CRYSTAL / F	LTERS		1LB4A10B08800	SPEAKER, 8
X801	1AV4V10B0560N	OSC, CRYSTAL 32.768KHZ	SP902	1LB4A10B03800	SPEAKER, 8-5W
X6101	1AV4V10B8280G	OSC, CRYSTAL 25.000MHZ		1LB4A10B08800	SPEAKER, 8
X6200	1AV4F31B0540N	CERAMIC FILTER 4.5MHZ	 ∆U901	1AV4U20C09700	UNIT, POWER
X6201	1AV4V10B7390G	OSC, CRYSTAL 24.576MHZ	1 €W901	1AV4W10B17901	CORD, POWER-2.0MK-VTR-02
				1AV4W10B18001	CORD, POWER-2.0MK-VTR-02

CABINET PARTS LIST

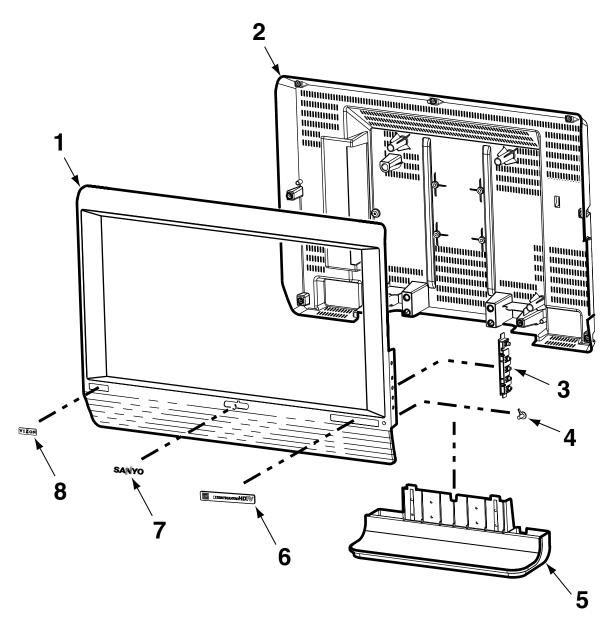


CABINET PARTS LIST

ACCESSORY PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION	 KEY NO.	PARTS NO.	DESCRIPTION
1	1AA2CAM0539	CABINET FRONT		1JC6P1P0261	OWNERS MANUAL (ENG/SPA/FRE)
2	1AA2CBM0425	CABINET BACK		1AV0U10B43104	ASSY, REMOCON
3	1AA2BUM0529	BUTTON UNITED		1AA2RCM0295-A	RC-BATTERY LID
4	1AA2CPM0140	CAP RC			
5	1AA2SDM0170	STAND BASE			
6	1AA2DES0861-K	DEC SHEET DTV			
7	1AV2BAAS015AA	BADGE, SANYO			
8	1AA2DES0712-F	DEC SHEET, VIZON			


COMPONENT AND TESTPOINT LOCATIONS

MAIN BOARD PARTS SIDE

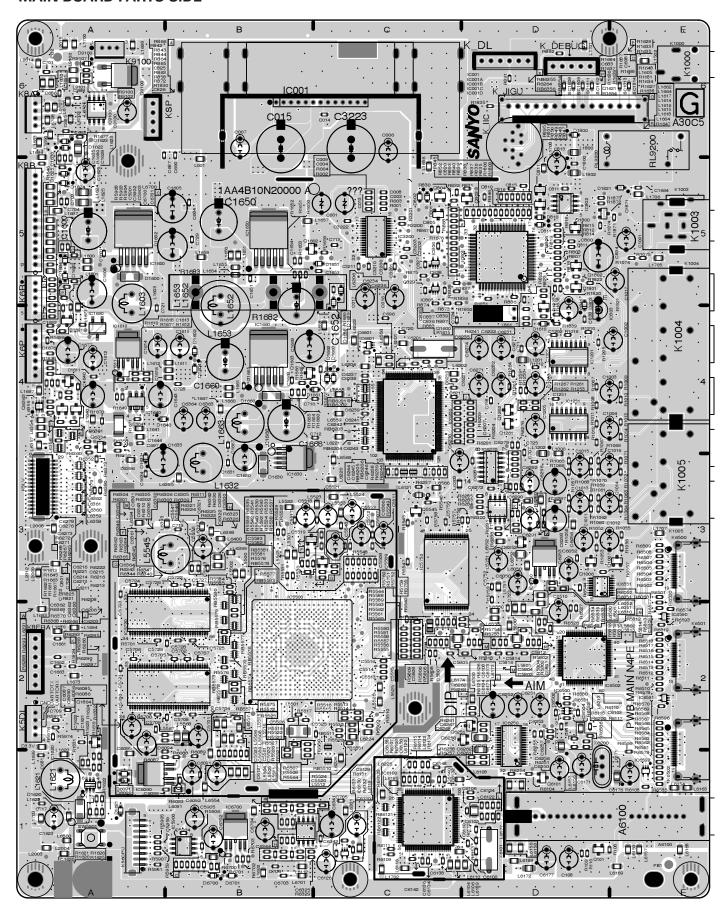


COMPONENT AND TESTPOINT LOCATIONS (Cont.)


MAIN BOARD FOIL SIDE

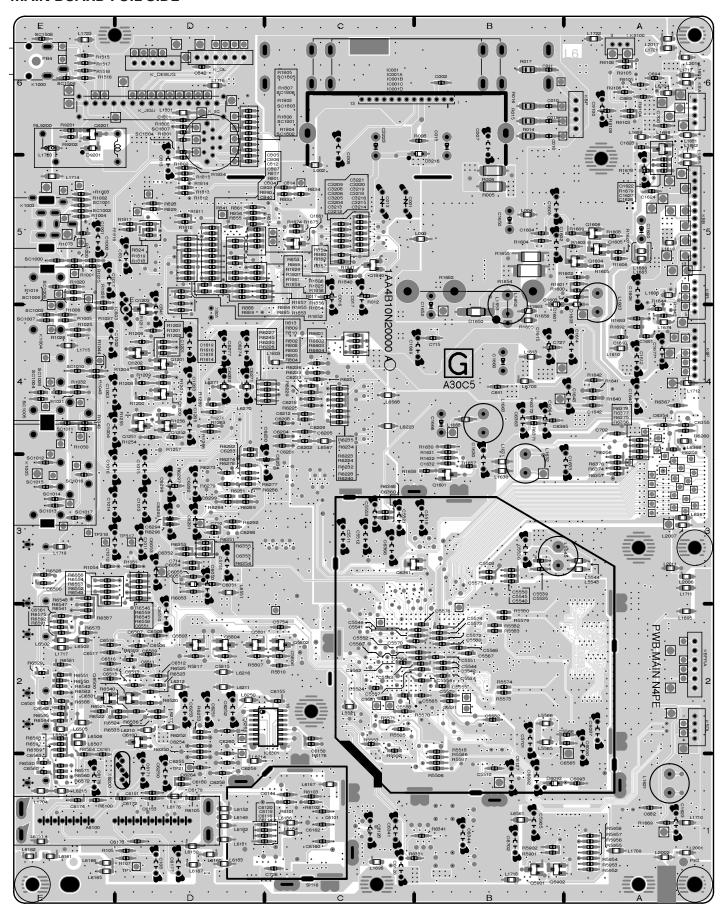

BLOCK DIAGRAM POWER LINES

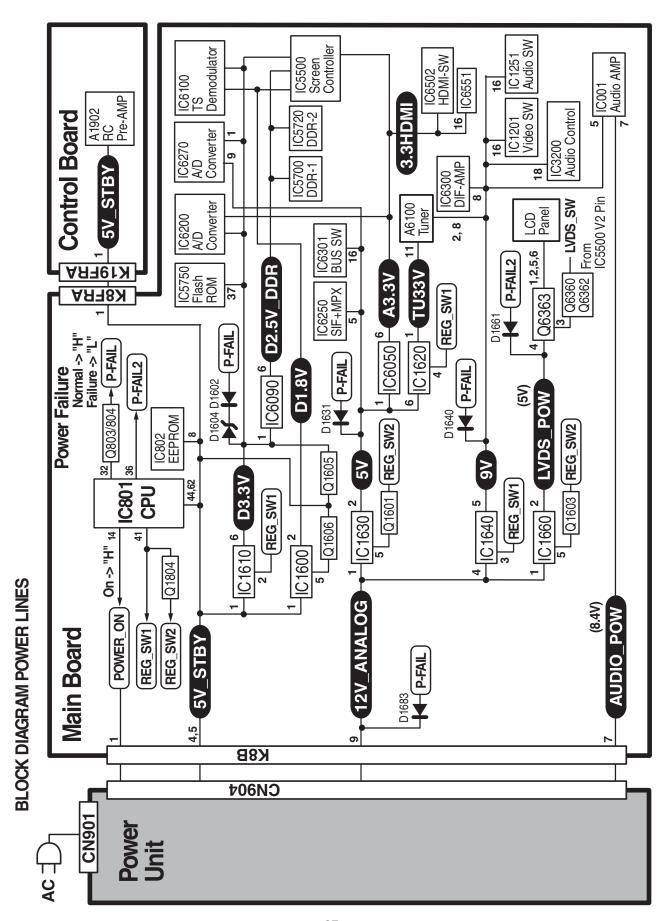


BLOCK DIAGRAM SIGNAL LINES

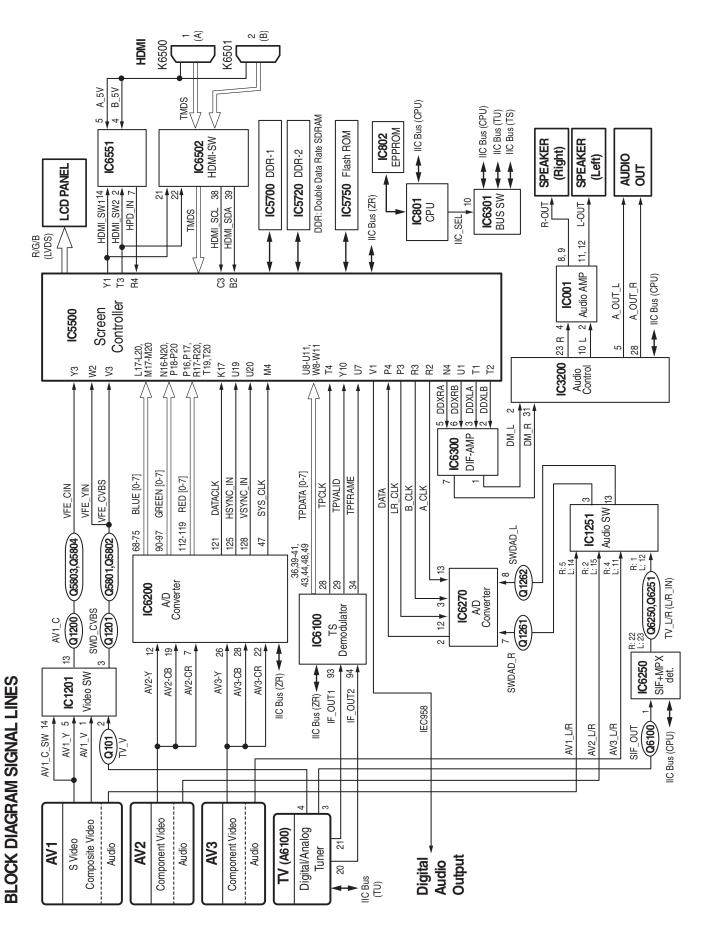


IC BLOCK DIAGRAMS

IC001, Audio AMP

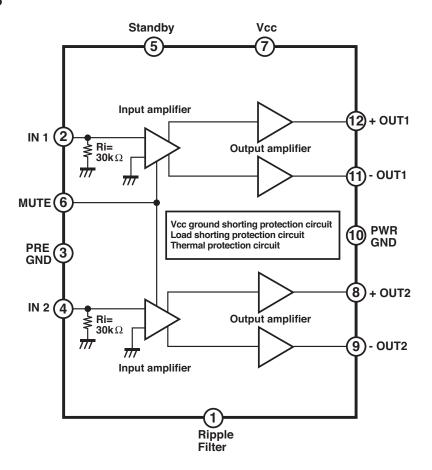


IC1201, IC1251 Video and Audio Select

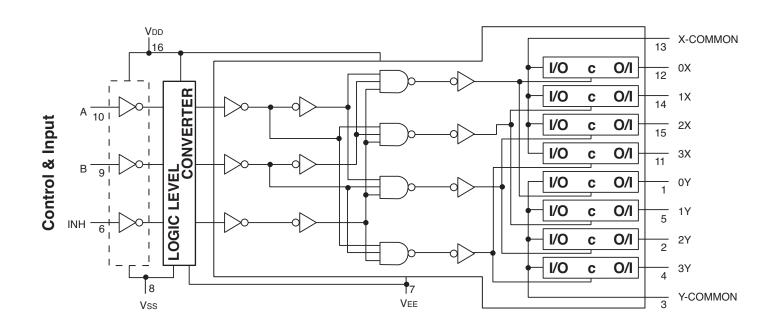


IC BLOCK DIAGRAMS (CONT.)


IC1600, DC to DC Converter

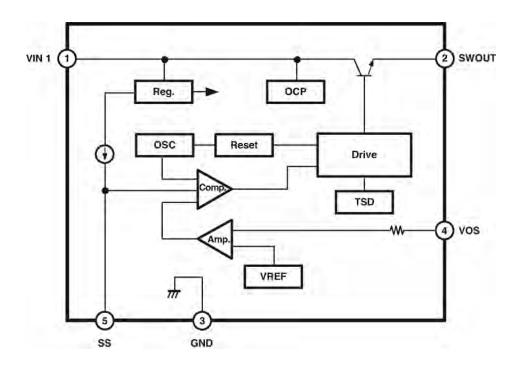


IC1620, DC to DC Converter

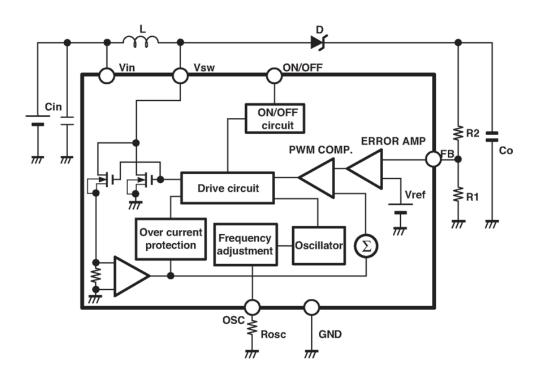

IC1630, DC to DC Converter

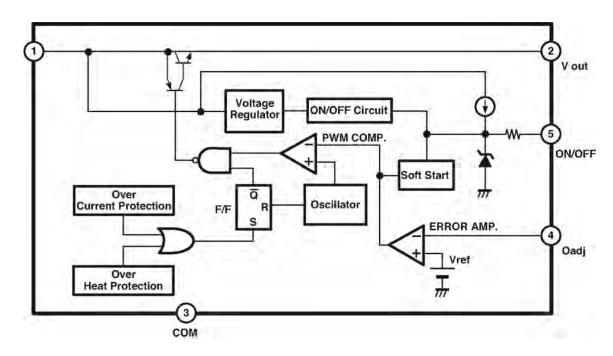


IC1640, DC to DC Converter

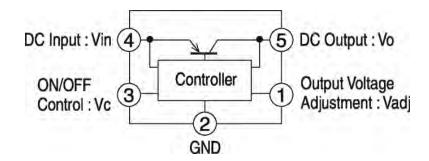


IC BLOCK DIAGRAMS (CONT.)

IC5500 Screen Controller

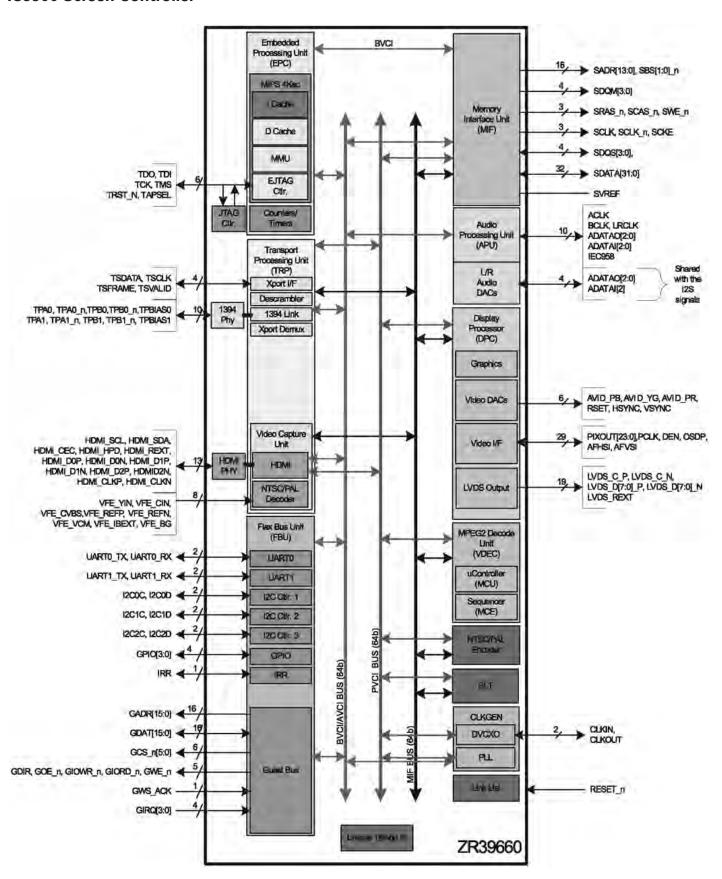


IC5700, IC5720 DDR: Double Data Rate SDRAM

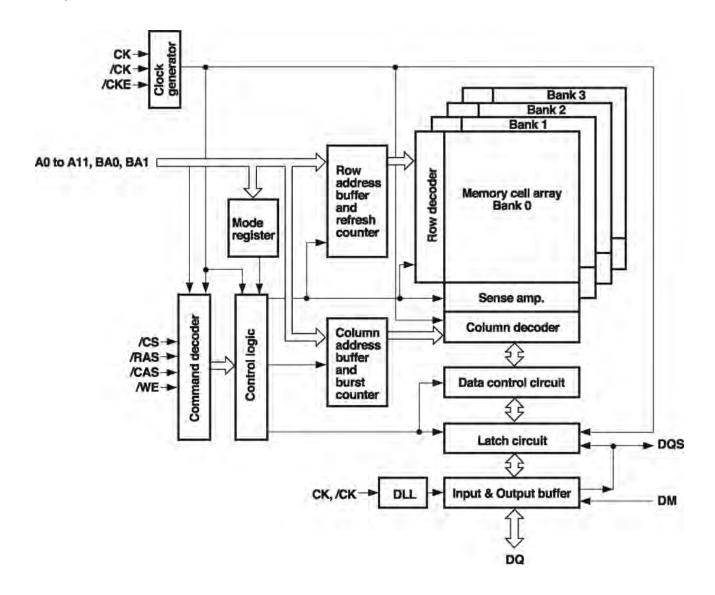


IC BLOCK DIAGRAMS (CONT.)

IC6100, TS Demodulator

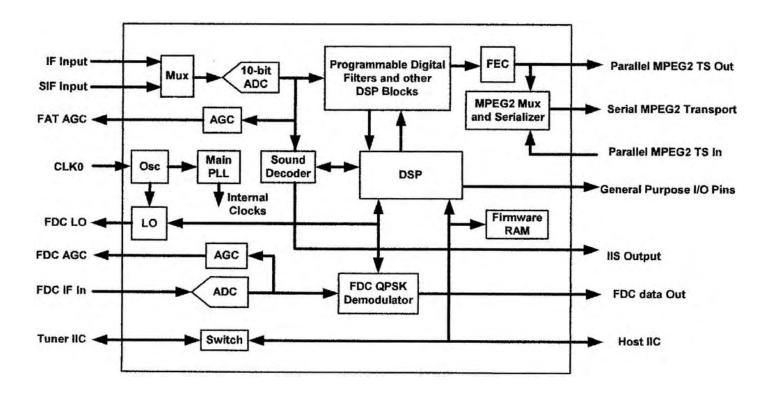


IC6200, A/D Converter

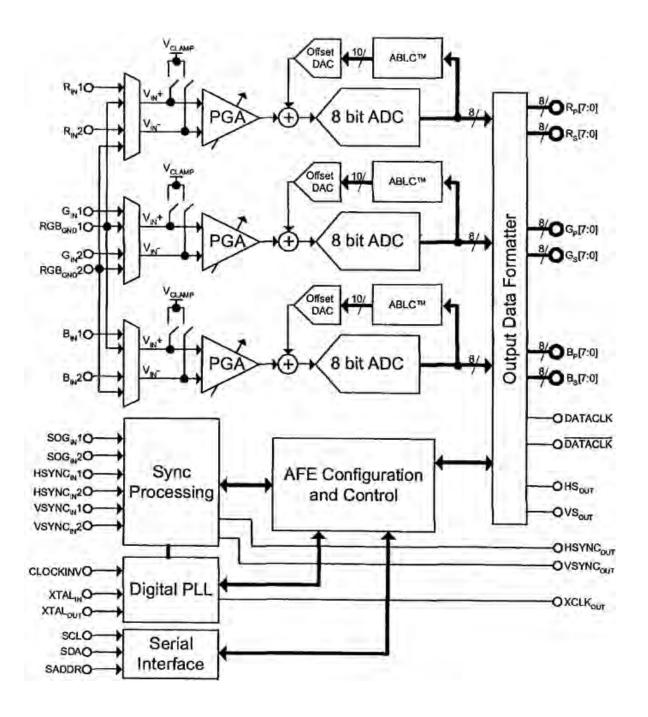



IC BLOCK DIAGRAMS (Cont.)

IC6502, DVI / HDMI SWITCH

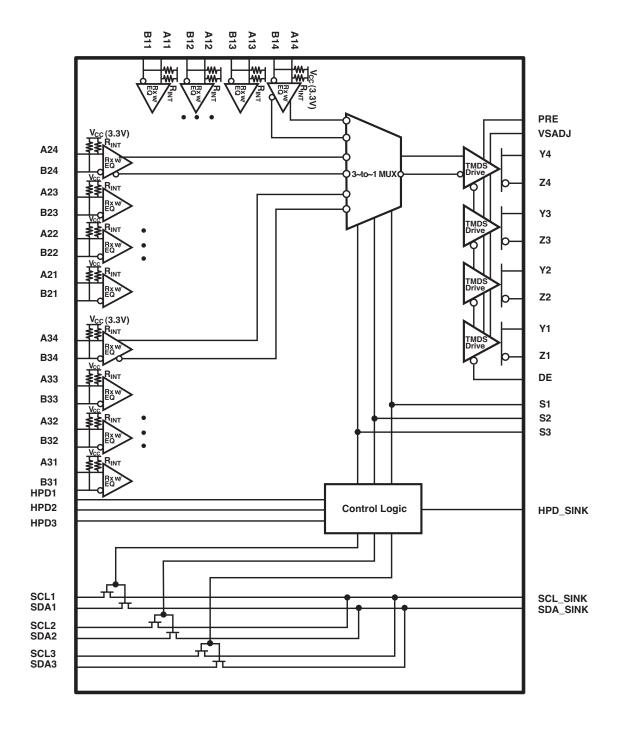


IC6551, HDMI MULTIPLEXER

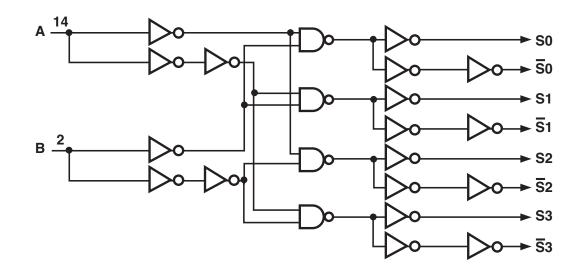

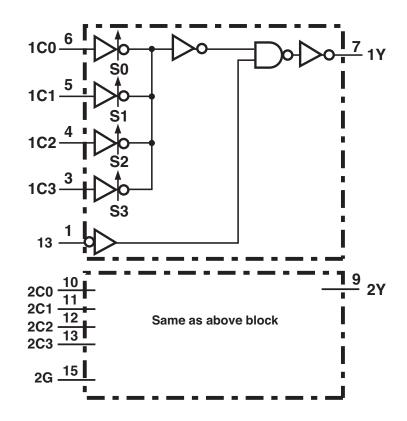


IC BLOCK DIAGRAMS (CONT.)

IC6270, STEREO A/D CONVERTER

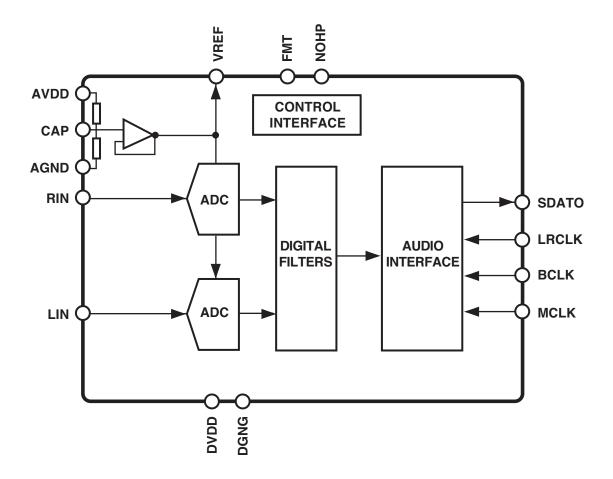


TROUBLESHOOTING FLOW CHARTS


NO POWER

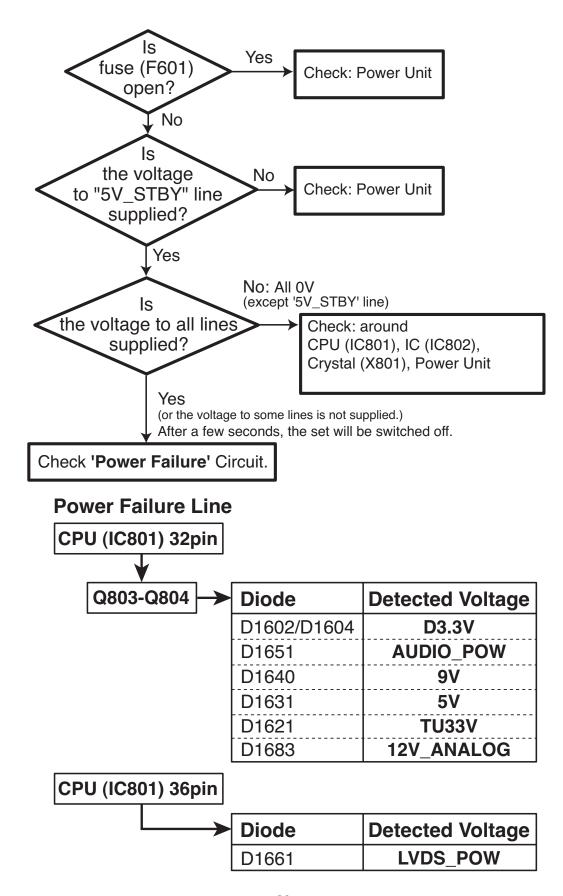

TROUBLESHOOTING FLOW CHARTS (Cont.)

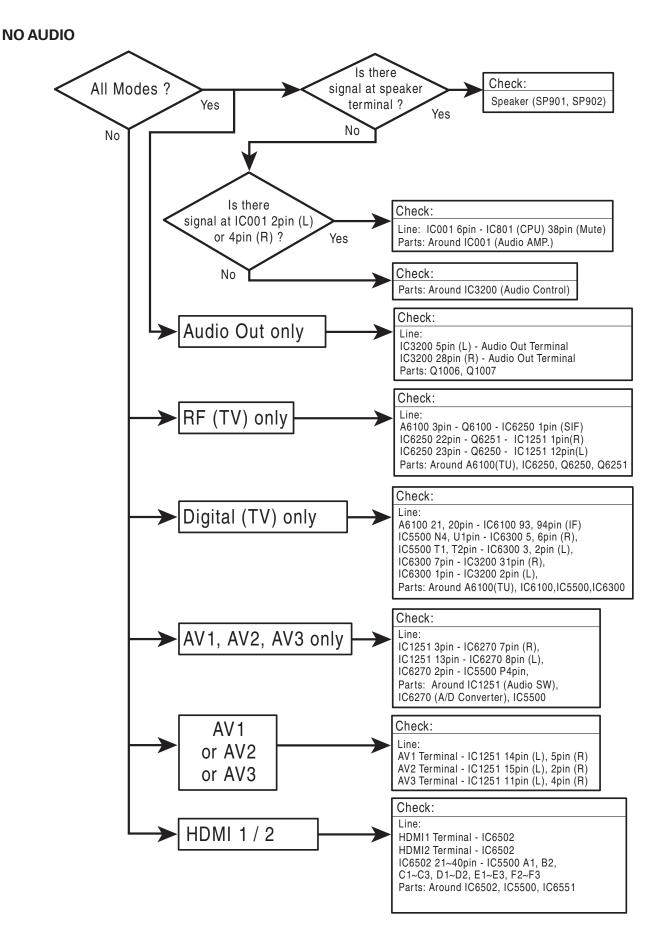

NO VIDEO

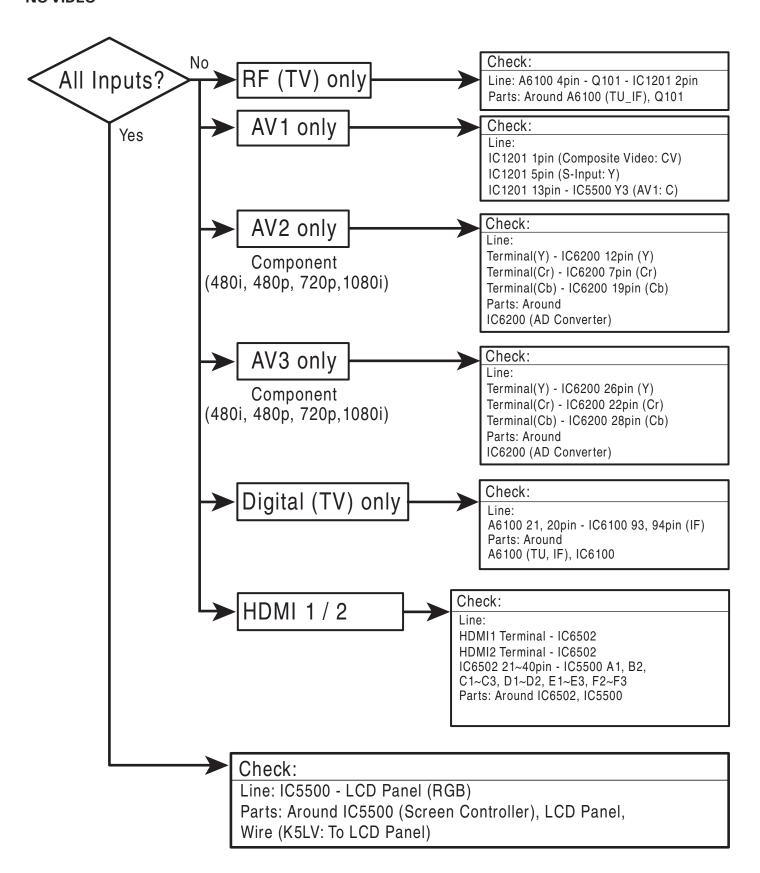

CONTROL PORT FUNCTIONS

System Control (CPU : IC801)

Pin	Name	Function	I/O	Description	
1	CVin	Reserve	IN	GND (0Vdc)	
	P70/INT0/TOLCP	LINE OFF	IN		
2	P71/INT1/TOHCP	Reserve	OUT	Detect AC Voltage Reduction (Normal: High)	
3	P72/INT2/TOIN		OUT	(Open)	
4		Display Enable		(Unused) RC Input	
5	P73/INT3/TOIN	RC in	IN	· ·	
6	ANO	Key in	IN	Key Input	
7 8	AN1 P82/AN2	AFT S-Figure in Tuner Switch	IN OUT	AFT S-Figure Input Tuner Bus SW (Analog-RF: High, Other: Low)	
9	P83	Reserve	OUT	(Open)	
10	P84/AN4	Reserve	OUT	(Open)	
11	P85/AN5	VS-ON	OUT	(Unused)	
12	P86/AN6	Panel Ready	IN	(Unused)	
13	P87/AN7	S IN	IN	S-Detect	
14	P30/S06	TV Relay out	OUT	POWER ON/OFF SW (Power On: High)	
15	SB6	IIC-BUS for NV	1/0	(DATA) Active 'L' for IIC data NV	
16	SCK6	IIC-BUS for NV	OUT	(CLOCK) Active 'L' for IIC clock NV	
17	SB6	IIC-BUS for TV	1/0	(DATA) Active 'L' for IIC data TV	
18	SCK6	IIC-BUS for TV	OUT	(CLOCK) Active 'L' for IIC clock TV	
19	DBGP0	DBGP0	1/0	Terminal for De-Bug 1	
20	DBGP1	DBGP1	I/O	Terminal for De-Bug 2	
21	DBGP2	DBGP2	IN	Terminal for De-Bug 3	
22	PC0	ENA/DATA1	I/O	Writing on board (ENA/DATA1)	
23	PC1	DATA0	I/O	Writing on board (DATA0)	
24	PC2	CLK	IN	Writing on board (CLK)	
25	PC3	TB in	IN	Detection for Video Signal (Time base: H)	
26	PC4	Reserve	OUT	(Open)	
27	P00	WDT out	OUT	Watch dog timer (Reserved: Open)	
28	P01	AV SW1	OUT	Selection for AV Selector 1	
29	P02	AV SW2	OUT	Selection for AV Selector 2	
30	P03	AV SW3	OUT	Selection for AV Selector 3	
31	P04	AV SW4	OUT	Selection for AV Selector 4	
32	P05	Power Fail-1 in	IN	TV Power Error (Error: Low)	
33	P06	STATUS in	IN	For factory use	
34	P07	Ack out	OUT	For factory use	
35	P20/SO1	5V Discharge	OUT		
36	P21/S11/SB1	Power Fail-2 in	IN	(Unused)	
37	P22/SCK1	A-OUT Mute	OUT	Audio Out Mute (On: High)	
38	P23	Audio MUTE	OUT	Audio Mute (On: High)	
39	UTX	UART OUT	OUT	Digital Module microcomputer piece confidence	
40	URX	UART IN	IN	Digital Module microcomputer piece confidence	
41	P26/OSDCK1	REG SW	OUT	REG On/Off SW (On: High)	
42	BL2	Reserve	OUT	(Open)	
43	VSS2	Vss	IN	GND (0Vdc)	
44	VDD2	Power IN	IN	5V (5Vdc±10%)	
45	P10/S00	Reserve	OUT	(Open)	
46	P11/SI0/SB0	Reserve	OUT	(Open)	

CONTROL PORT FUNCTIONS (Cont.)

System Control (CPU : IC801 Cont.)

Pin	Name	Function	1/0	Description	
47	P12/SCK0	PDP/LCD	IN	Option Setting (PDP: High, LCD: Low)	
48	P13	Panel Size 3	IN	Panel size	
49	P14	Panel Size 2	IN	Panel size	
50	P15	Panel Size 1	IN	Panel size	
51	P16	Panel Size 0	IN	Panel size	
52	P17	Reserve	OUT	(Open)	
53	BL1	Reserve	OUT	(Open)	
54	В	Reserve	OUT	(Open)	
55	G	Reserve	OUT	(Open)	
56	R	Reserve	OUT	(Open)	
57	HSB	Hsync	IN	GND (0Vdc)	
58	VSB	Vsync	IN	GND (0Vdc)	
59	VSS1	Vss	IN	GND (0Vdc)	
60	XT1	Xin	IN	Main Clock IN/OUT Fosc=8MHz	
61	XT2	Xout	OUT	(Should be connected between IN/OUT pins.)	
62	VDD1	Power IN	IN	5V (5Vdc±10%)	
63	RESB	RESET in	IN	Reset terminal	
64	FILT	FILT out	OUT	PLL Filter	

Mode Switching Table

Mode	AVSW1 (pin28)	AVSW2 (pin29)	AVSW3 (pin30)
Analog Tuner	Low	High	Low
AV1(CVBS)	High	High	Low
AV1(S)	High	Low	Low
AV2(Component 2)	Low	Low	High
AV3(Component 3)	Low	Low	Low
Digital Tuner or HDMI	Low	Low	Low
HDMI (DVI)	Low	Low	Low

SCHEMATIC DIAGRAMS

NOTES ON SCHEMATIC DIAGRAMS

- 1. All resistance values in ohms K=1,000 M=1,000,000.
- 2. Resistors specified with resistance value are "1/6DJ."
- 3. Resistors specified with type of resistor, tolerence and resistance value are "1/4."
- 4. Unless otherwise noted on schematic, all capacitor values less than 1 are expressed in μF (Micro Farad), and the values more than 1 are in pF.
- 5. All capacitors are 50 WV rating unless otherwise noted.
- 6. The Symbol wi indicates a fusible resistor, which protects the circuit from possible short circuits.
- 7. Parts enclosed with are related with X-radiation.
- 8. Isolation border line. Cold Side Hot Side
- 9. Schematic part location numbers may not always match the schematic symbols.

The schematic symbols and part descriptions are correct and should be used.

The part descriptions will be listed under the location number in the parts list.



ELECTROSTATICALLY SENSATIVE DEVICES

Many solid-state devices (especially Integrated Circuits) are Electrostatically Sensitive, and, therefore, require special handling techniques as described under "Servicing Electrostatically Sensitive Devices," on page two in this service literature.

SERVICE NOTES:

- 1. When replacing parts on circuit boards, clamp the lead wires to terminals before soldering.
- 2. When replacing high wattage resistors on circuit board, keep the resistor body 10 mm (3/8) from circuit board.
- 3. Keep wires away from high voltage and high temperature components.


PRODUCT SAFETY NOTICE

THE COMPONENTS DESIGNATED BY A \triangle ON THIS SCHEMATIC DIAGRAM DESIGNATE COMPONENTS WHOSE VALUES ARE OF SPECIAL SIGNIFICANCE TO PRODUCT SAFETY. SHOULD ANY COMPONENT DESIGNATED BY A \triangle NEED TO BE REPLACED, USE ONLY THE PART DESIGNATED IN THE PARTS LIST. DO NOT DEVIATE FROM THE RESISTANCE, WATTAGE AND VOLTAGE RATINGS SHOWN.

PROPER DISPOSAL


Color Televisions can contain hazardous materials including but not limited to lead and mercury. Dispose of CRTs, LCD Panels, LCD Panel Lamps, Plasma Displays and Circuit Boards according to all Federal, State and Local laws and guidlines.

IC, DIODE, AND TRANSISTOR PIN LAYOUTS

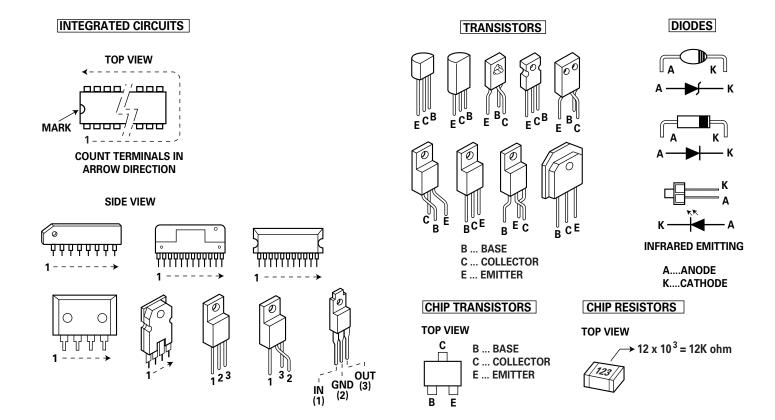


CAPACITOR AND RESISTOR CODE CHART


CAPACITOR (Example)

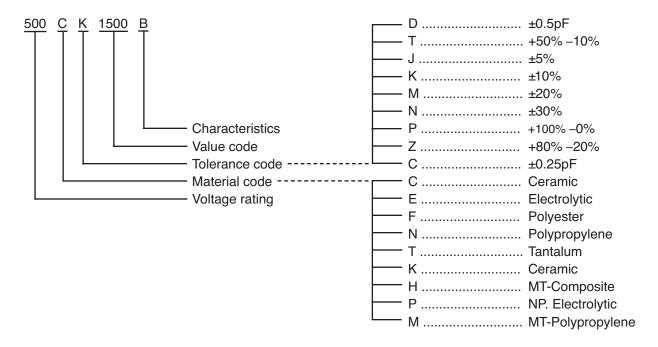

RESISTOR (Example)

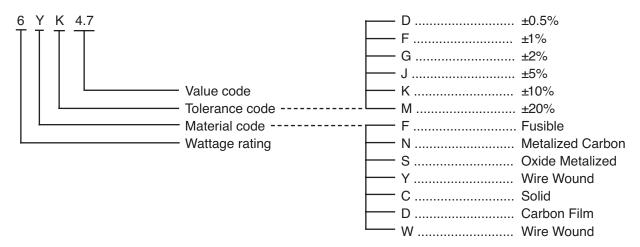

PC BOARD CONNECTIONS AND LOCATIONS

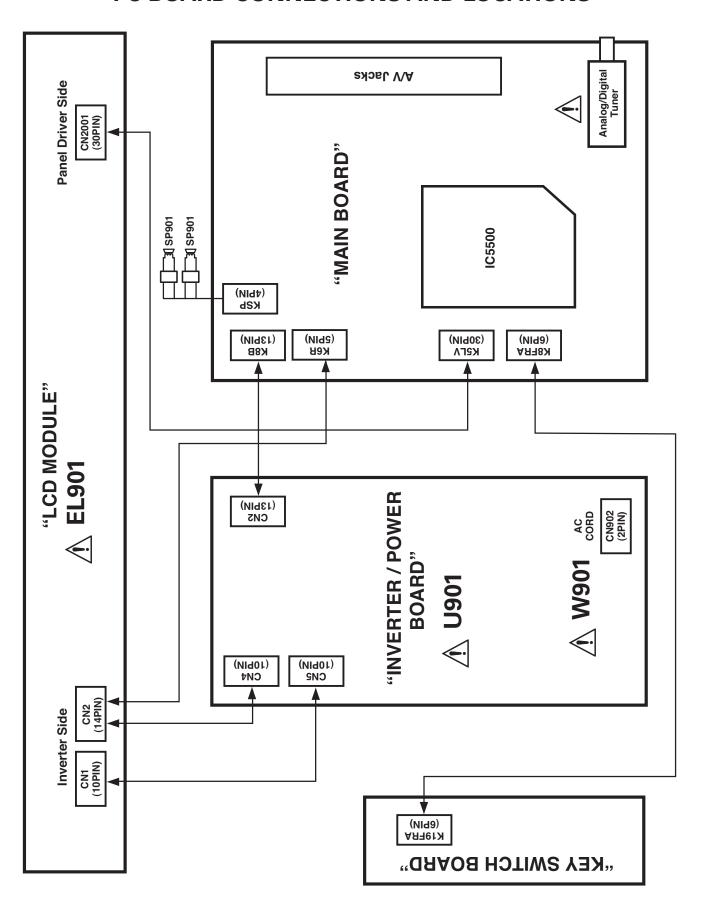

For parts or service contact

Sanyo Manufacturing Corporation

P.O. Box 2000

3333 Sanyo Road

Forrest City, Arkansas 72335-2000

May 2007 SMC Published in U.S.A.

